
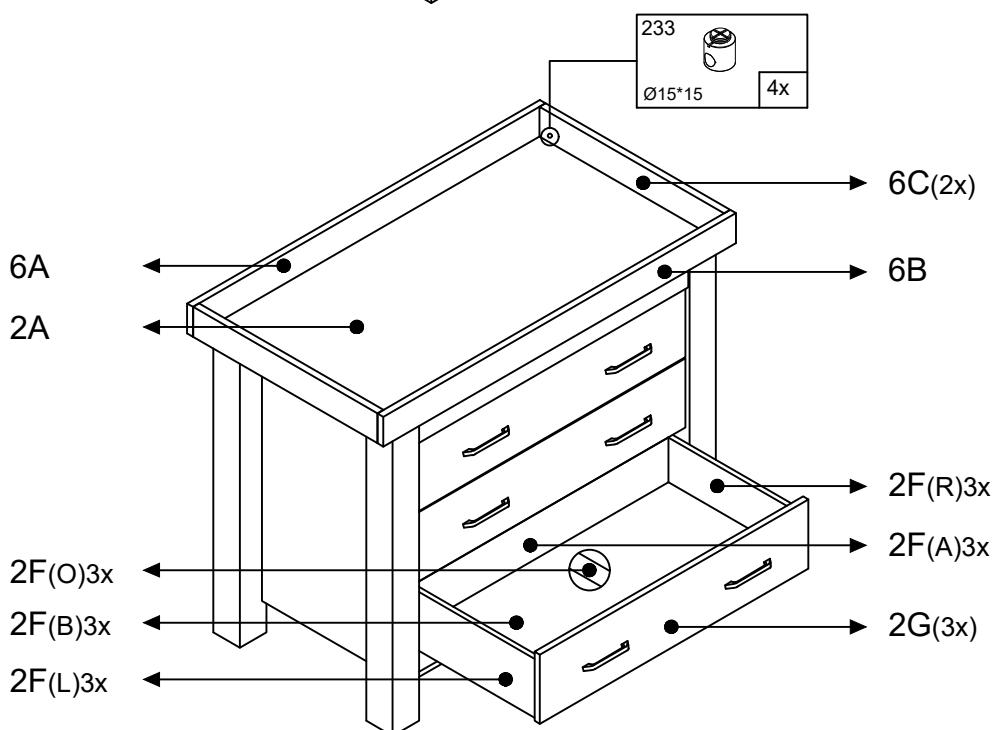
 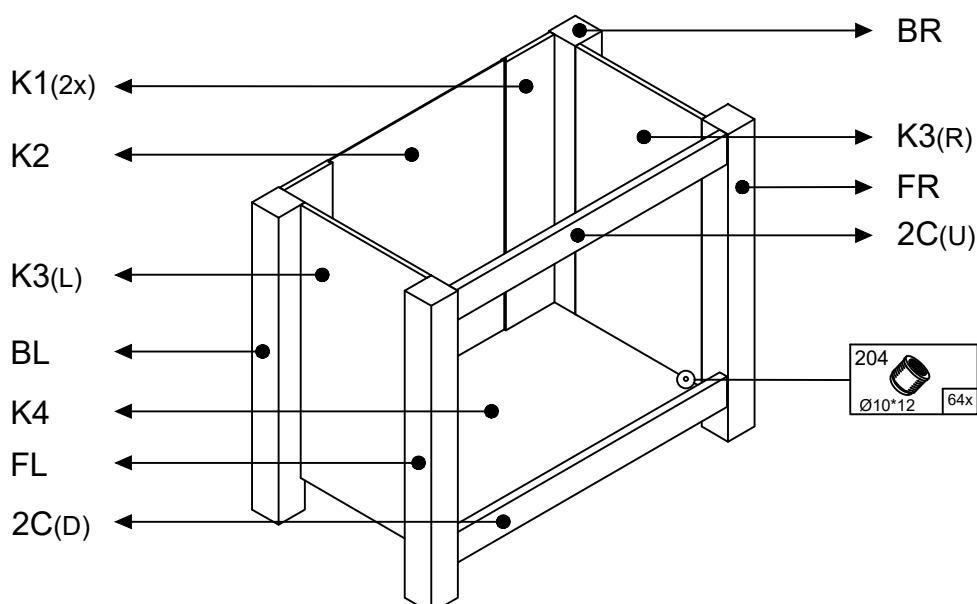


BS-OATMEAL Instructions


IMPORTANT. RETAIN FOR FUTURE REFERENCE.
READ CAREFULLY

50 MIN






OAT2172: K1,K2,K4,2A,2C
OAT2272: K3,BL,BR,FL,FR
OAT2372: 2F,2G,2K,2L
OAT2472: 6A,6B,6C

2K


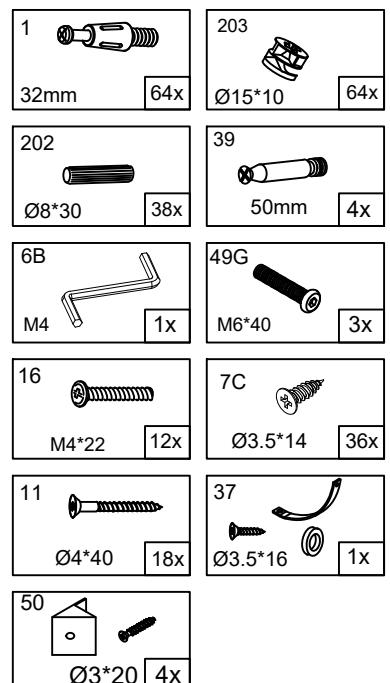


2L

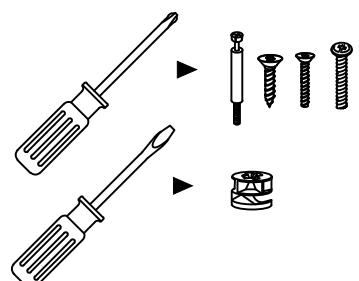
 




 


K4
2C(D)
FL
K3(L)
BL
FR
K3(R)
BR

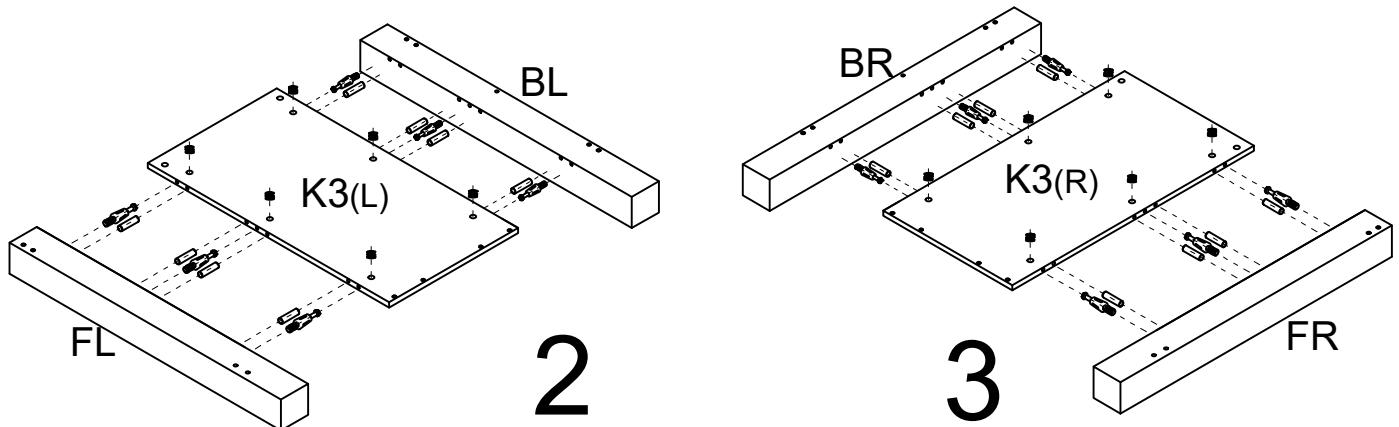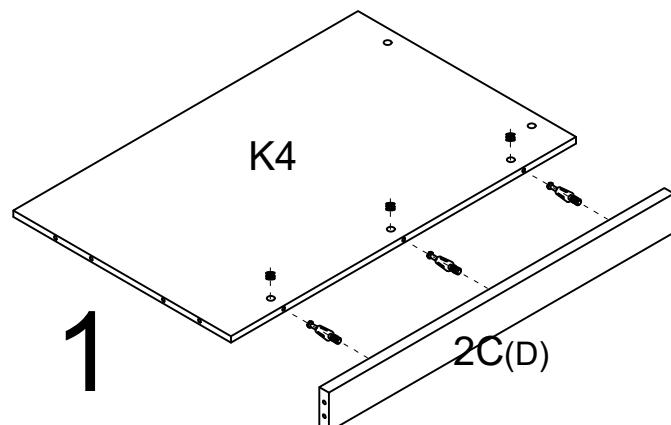


K4
2C(D)

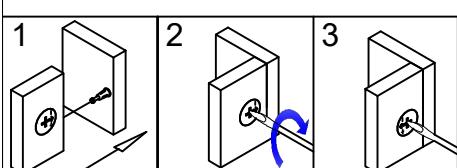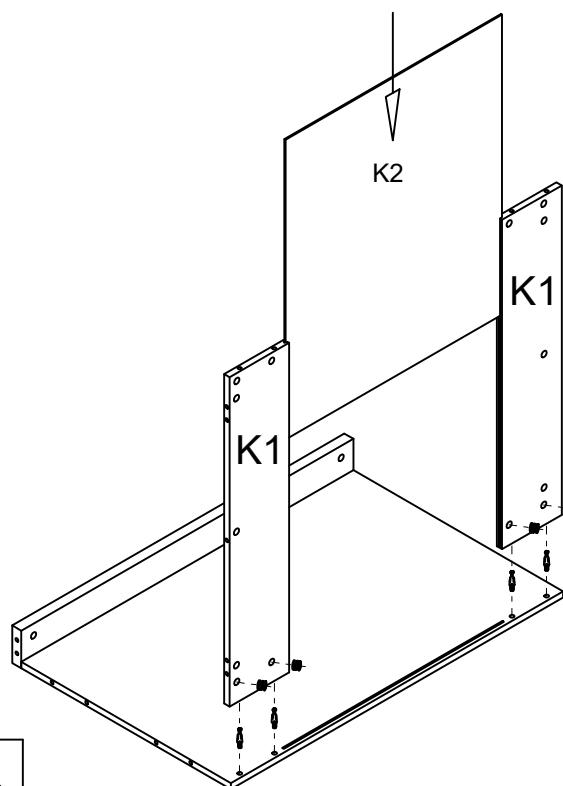

 
 
 


K3(L)


2C(U)

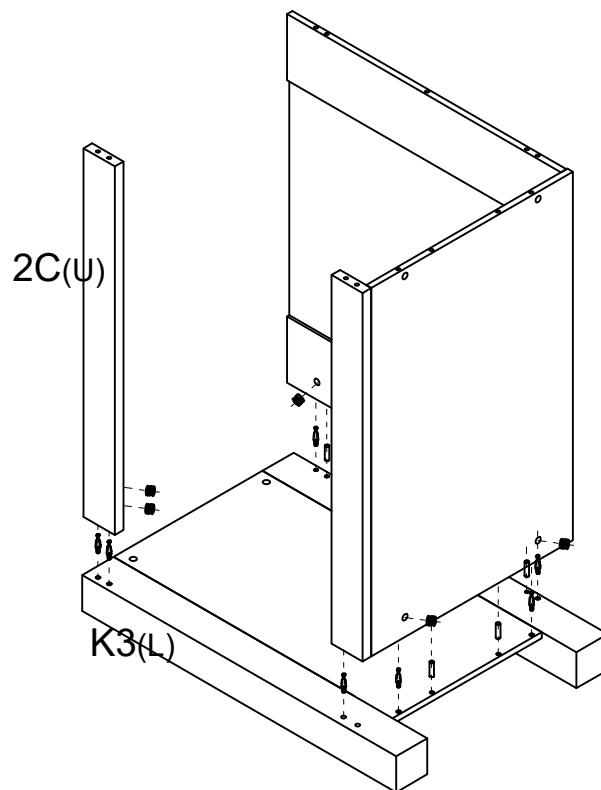




5

   

K3(R)

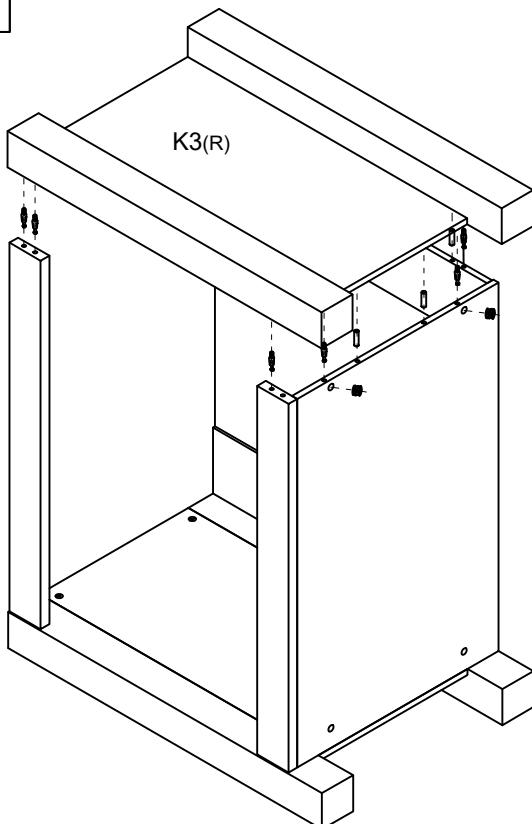


6

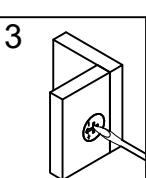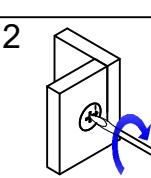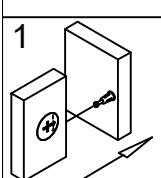



1 32mm 11x	203 Ø15*10 11x	202 Ø8*30 4x
------------------	----------------------	--------------------

2A




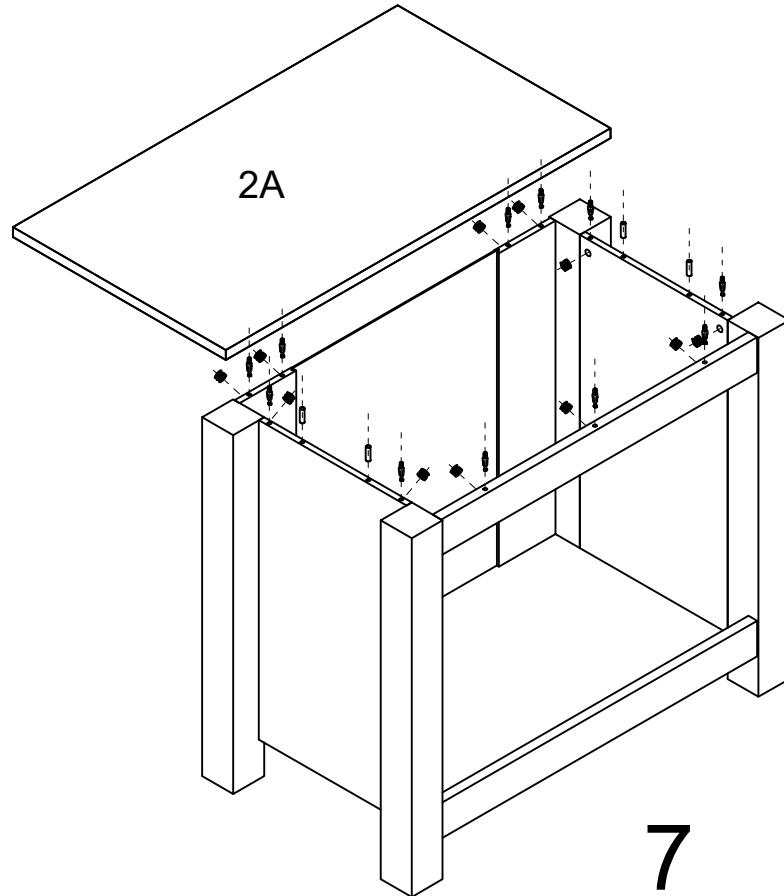


11 Ø4*40 18x	16 M4*22 12x	54Y 6x	1 32mm 18x	203 Ø15*10 18x	22 450mm 3x	7C Ø3.5*14 18x	202 Ø8*30 6x
--------------------	--------------------	-----------	------------------	----------------------	-------------------	----------------------	--------------------




2F (A)3x
2F (R)3x
2F (L)3x
2F (O)3x
2F (B)3x
2G (3x)

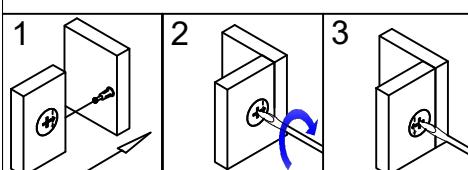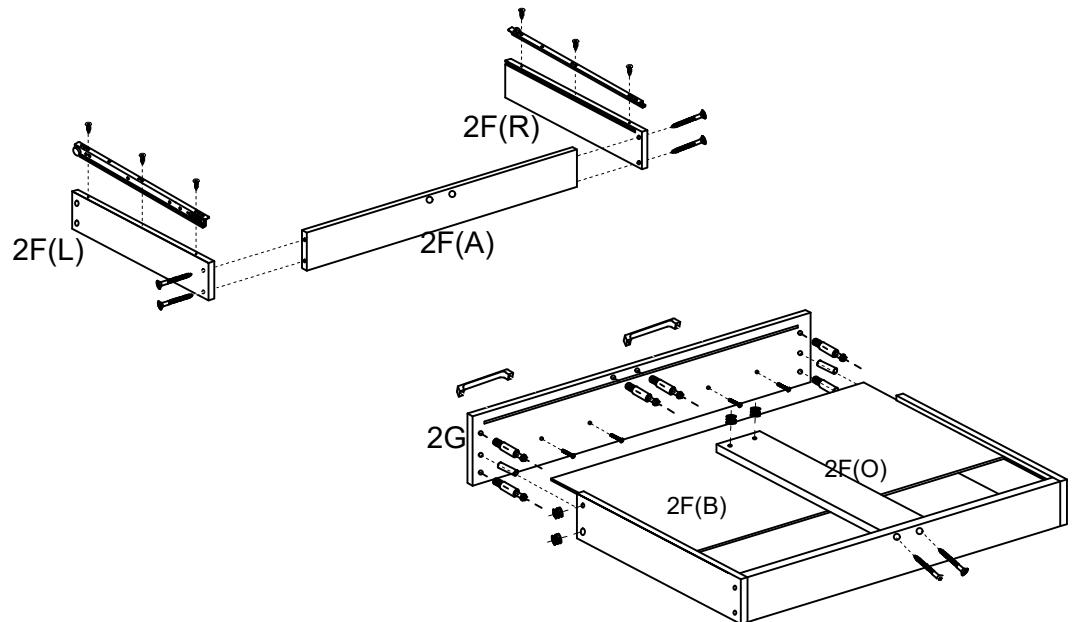

8 (3x)

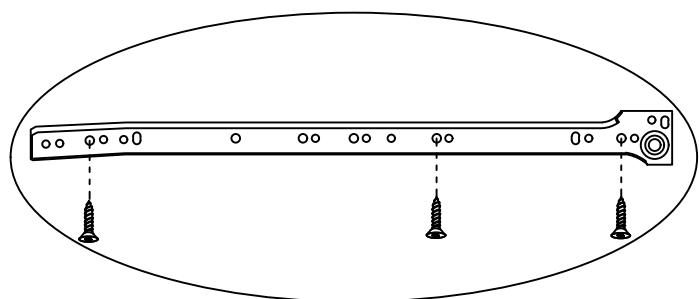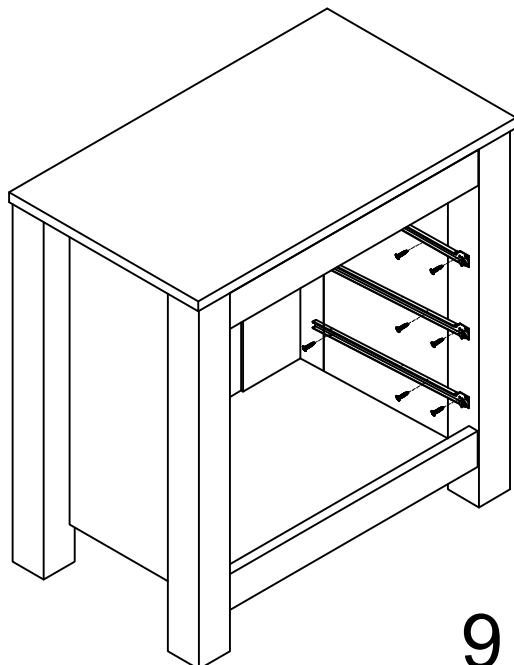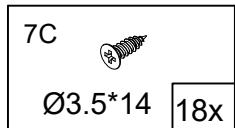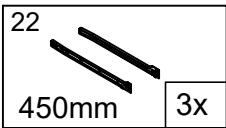




9

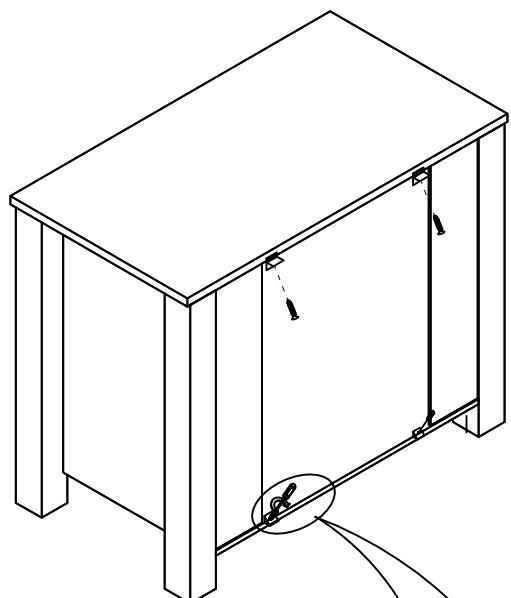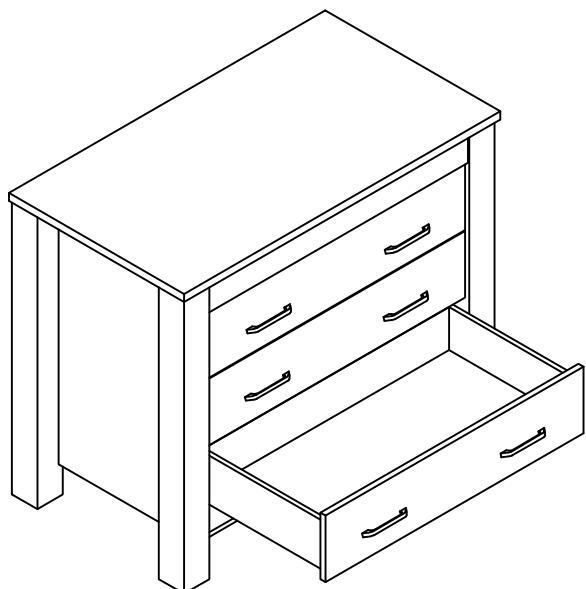 


10

11




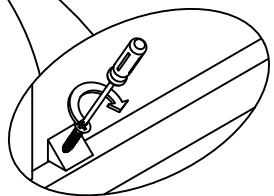


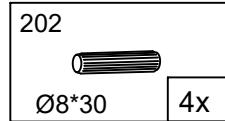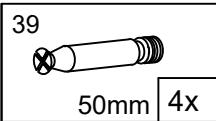

6A
6B
6C(2x)


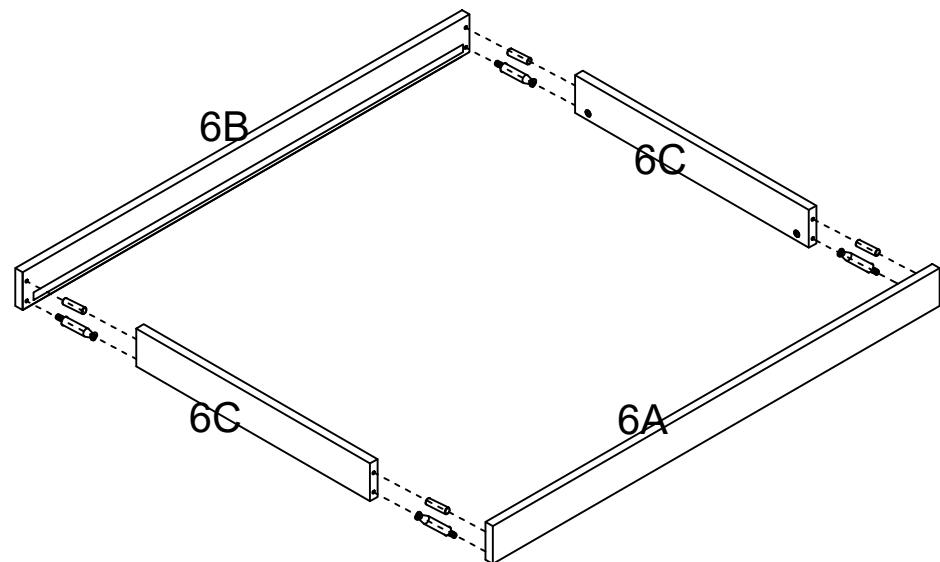


12

  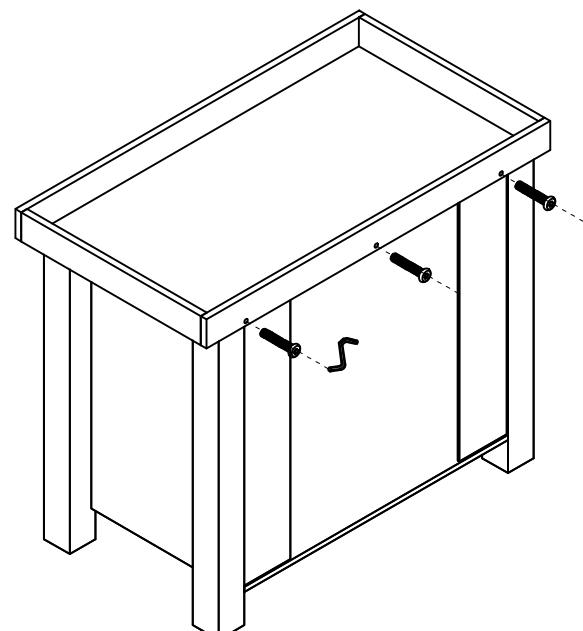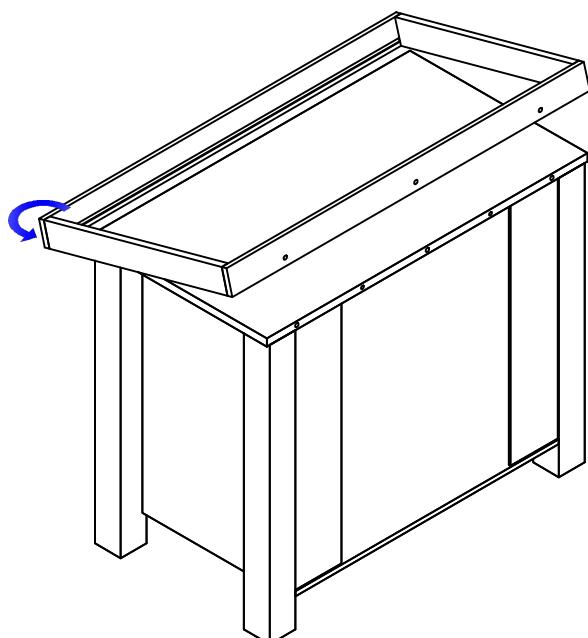


Safety belts

 
The stability and strength of this product have been tested extensively. In spite of taking good care of your child's behaviour; the child should not be climbing into or hanging on the product. This could be dangerous, especially when the drawers and doors are open. To guarantee the safety of your child as much as possible you must fit the included safety belts according to the assembling instructions; ensuring that the fastenings used are appropriate to the wall type.

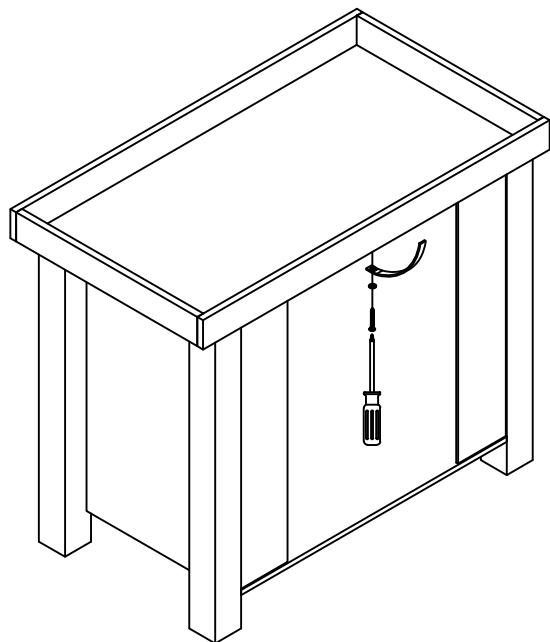

2 ▶

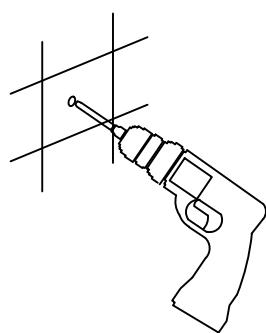

3 ▶

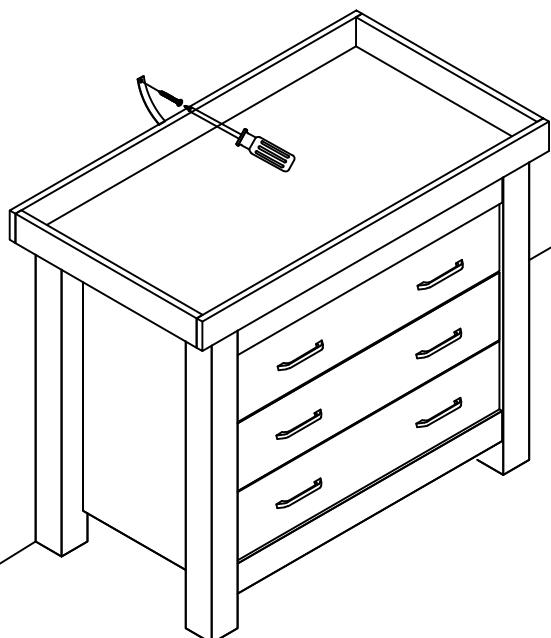

INSTRUCTIONS FOR SAFE USE AND MAINTENANCE

1. **WARNING: NEVER LEAVE YOUR CHILD UNATTENDED.
THE SAFETY OF YOUR CHILD IS YOUR RESPONSIBILITY.**
2. Do not allow children to climb on the dresser.
3. Never leave your child unattended on the dresser.
4. Never use the dresser if it is broken or damaged or there are parts missing.
5. Do not place the dresser in or near the vicinity of open fires or other sources of strong heat, such as gas or electric fires.
6. Always leave the dresser clean and dry. Wipe away any spillage straight away. The dresser can be cleaned with a clean damp cloth. Do not use aggressive cleaning agents such as bleach or strong detergents.
7. Check on a regular basis that all fittings and screws are correctly tightened and are not damaged. Loose screws can pinch parts of the body and clothing resulting in the risk of strangulation.
8. Only use a changing pad which perfectly fits between the borders of the changing unit. Never use a changing pad which is too big. Recommended size 90x52x3cm.
9. Maximum weight of the child 15 kg
10. Use only spare parts approved by BabyStyle.

Product development dictates that components may occasionally differ from the ones shown in the diagrams of these instructions. The right to change the specifications and design of the furniture without prior notice remains with the manufacturer.

Guarantee

All our products are produced from the finest quality materials and are manufactured under the strictest quality controls.

We guarantee all our products or part thereof against faulty manufacture; for a period of twelve (12) months from the date of purchase. This guarantee is not effective against accidental damage or damage caused by incorrect use or neglect. This does not affect your statutory rights.