


egg^{Z®}

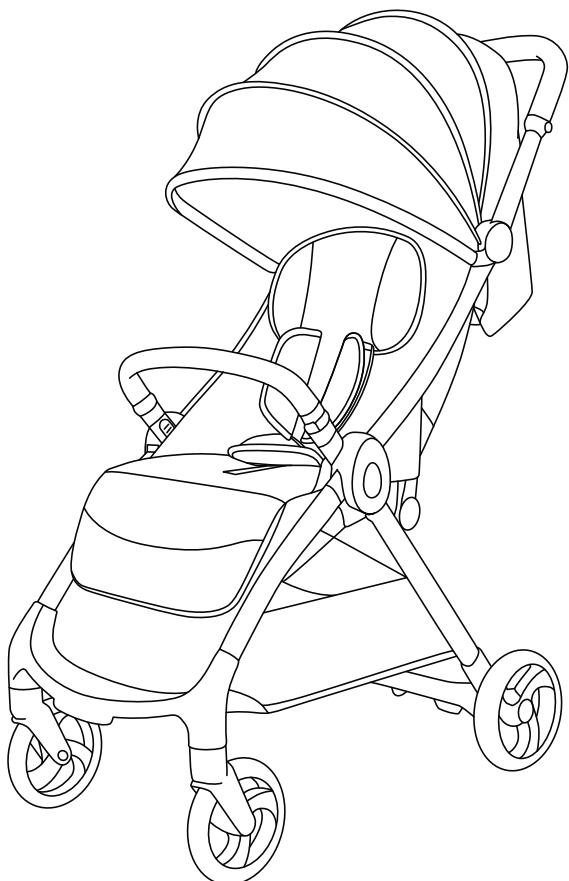

INSTRUCTION MANUAL

CONTENTS PAGE

- 2-3. Important safety information
4. Stroller overview / Inside the box
5. Assembly
6. Rear wheel installation & bumper bar installation
7. Folding the stroller
8. Backrest adjustment / Raincover fitting
9. Brake adjustment
10. Harness adjustment
11. Canopy & calf rest adjustment
12. Care and maintenance
- 13-14. Warranty policy & Terms

IMPORTANT - READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Important Safety Information.

This vehicle is intended for children from birth to a maximum of 22kg.

The seat unit is suitable for one child only to the maximum weight stated above.

It is important that any person intending to use this stroller understands the instructions.

WARNING: Never leave your child unattended.

WARNING: Ensure that all locking devices are engaged before use.

WARNING: To avoid injury ensure that the child is kept away when unfolding and folding this product.

WARNING: Do not let the child play with this product.

WARNING: Always use the restraint system (safety harness).

WARNING: Check the chassis is correctly engaged before use.

WARNING: This product is not suitable for running or skating.

WARNING: The maximum weight for the shopping basket is 3kg.

WARNING: Never lift/carry the chassis while occupied. Your child's safety may be at risk.

WARNING: Do not use the vehicle on steps, stairs or escalators; as it may be dangerous to your child.

WARNING: Always descend/mount kerbs on the back wheels, do not tip the stroller forward.

WARNING: Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.

WARNING: Always use the seat in the most reclined position for new born babies to approx. 6 months.

WARNING: Always use the crotch strap in combination with the waist belt.

WARNING: Never leave the stroller without first engaging the parking device. Avoid uphill or downhill parking.

WARNING: Never use a parasol attached to the stroller if there is wind.

WARNING: Do not use accessories that are not approved by the manufacturer.

WARNING: Do not use replacement parts other than those supplied by the manufacturer or supplier.

WARNING: This vehicle shall be used as a single occupancy child vehicle up to a maximum of 22kg.


WARNING: The stroller is suitable for children from birth to 22kg or 4 years whichever comes first.

WARNING: The parking device (brake) shall be engaged when placing and removing children.

The illustrations in this manual are used to demonstrate the operation of the product. Where there are small differences between the physical object and the illustrations, the physical stroller shall prevail.

Stroller Overview

Easy one-hand fold

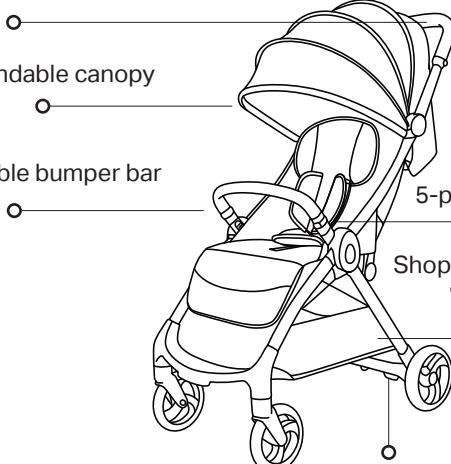

Extendable canopy

Detachable bumper bar

5-point harness


Shopping basket

Flip-flop friendly brake

Inside the box

Open the box and remove the stroller, rear wheels, bumper bar and raincover.


1. Box
2. Bumper bar
3. Rear wheels x 2
4. Front wheels x 2
5. Raincover
6. Instruction manual
7. Stroller

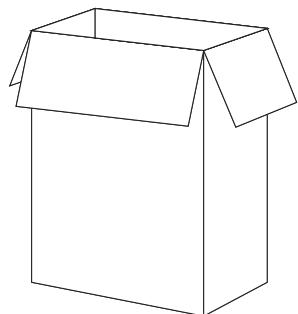


1.



 6.

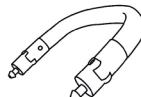

1.

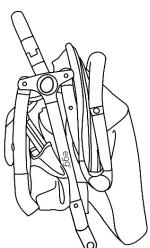


7.



5.



 
4.




3.

4.


Installation

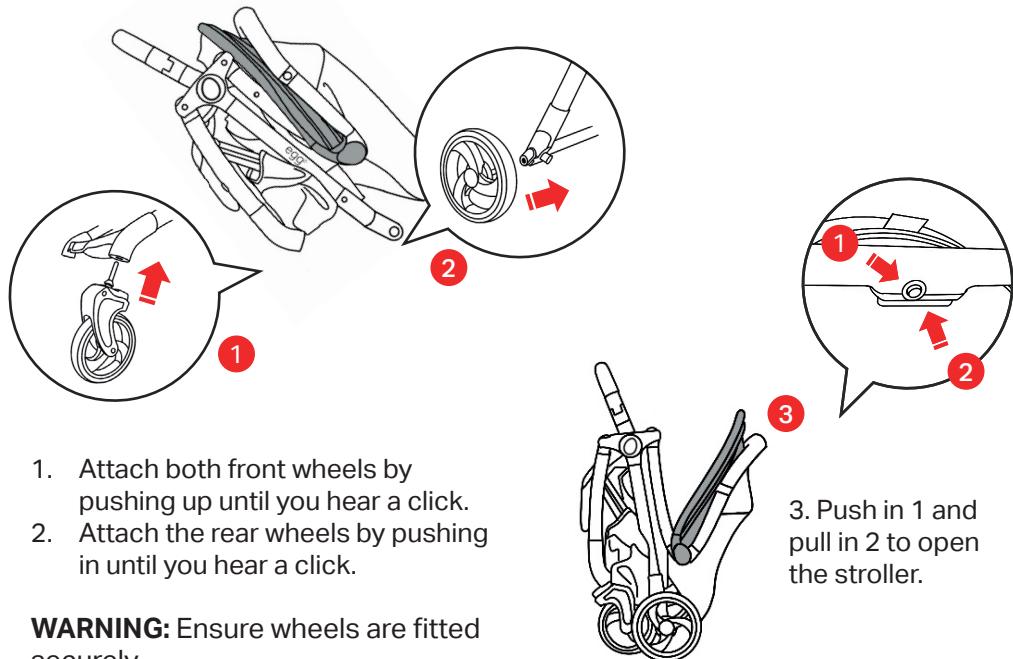


WARNING: Ensure wheels are fitted securely.

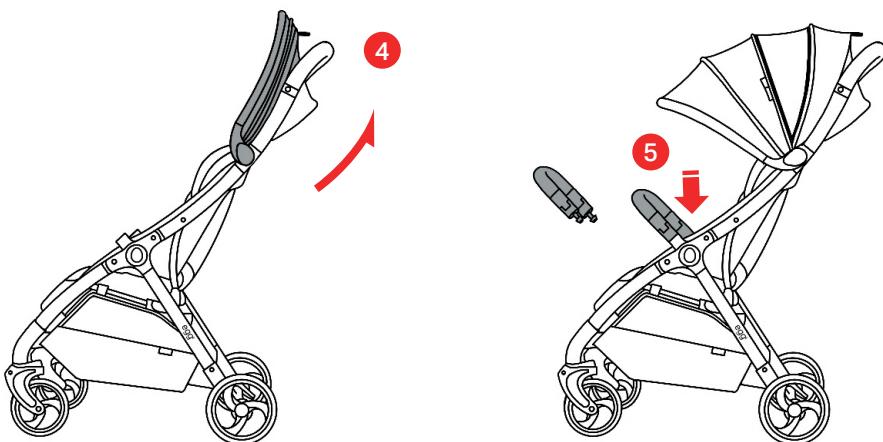

Rear Wheel Installation / Removal

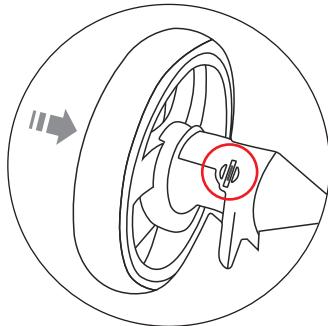


- ▶ Installation: Insert the rear wheel into the bracket and a 'click' sound will indicate that it is in place.

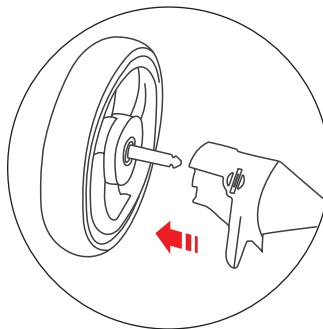


Removal : Push in the button on the bottom of the wheel bracket, then pull the wheel outwards.

Bumper Bar Installation

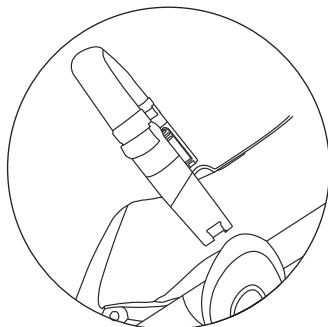



- ▶ Fitting: Attach the front bar by sliding into the catch until you hear the 'click' sound.

Removal: Press down the buttons on both sides and slide the front bar upwards to release it.


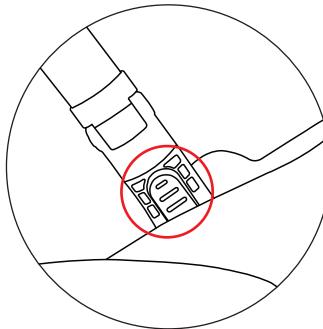


Folding the stroller

1. Close the canopy

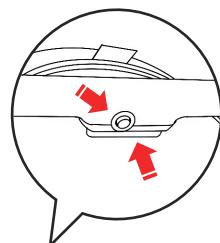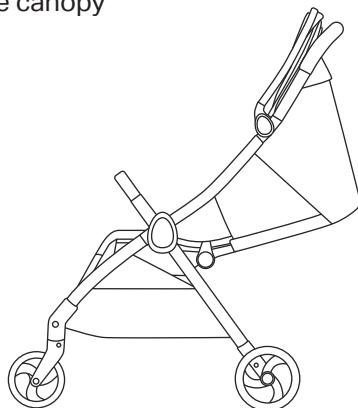



2. Using your thumb, hold the button on the bottom of the handle. Use the remaining fingers to press the button on the bottom of the handle, then release the handle. The stroller will fold.

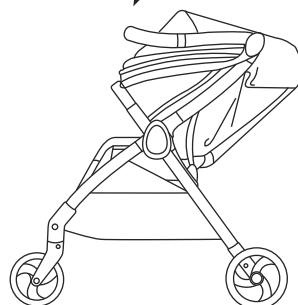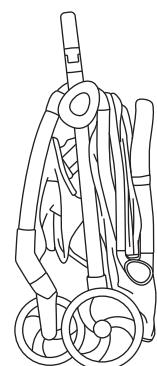

3. Fold the frame until it is fully closed.

Backrest Adjustment

1. To sit upright: Pull up the lever and push the backrest upwards

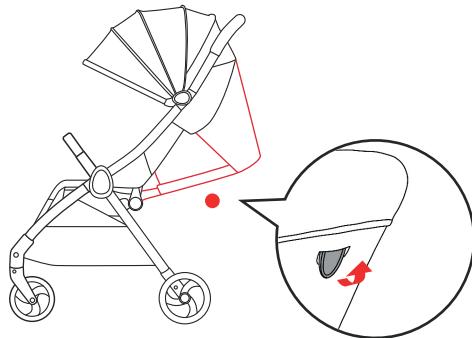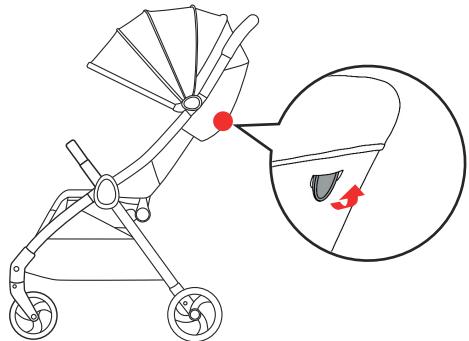

2. To lie down: Pull up the lever and move the backrest downward.


WARNING: Use in fully reclined position from birth to approx. 6 months old.

WARNING: Always use the harness.

Raincover Fitting


The stroller includes a clear coverall raincover. Always use the raincover in inclement conditions. To fit the raincover, unfold the cover and unfasten the large Velcro openings. Place the cover over the stroller so the raincover goes under the handlebar, fasten the Velcro at the sides. Connect the lower front plastic toggles to the loops by going around the front wheel housing for both sides. To remove the cover, unfasten the toggles at the front and release the Velcro under the handle then lift the cover away.

Brake Adjustment

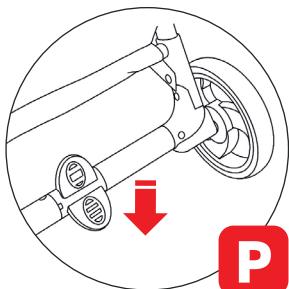


- ▶ Step on the brake pad at the rear wheel bar to apply the brake.

To release the brake, lift up the
brake pad or push down on the
highest part. ◀

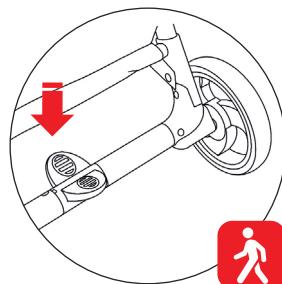


Front Wheel Installation / Removal

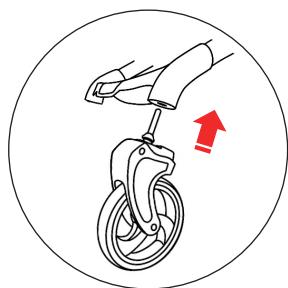


- ▶ Attach both front wheels
by pushing up until you
hear a click.

To remove the front wheel, press
in the button and pull the
wheel outwards. ◀

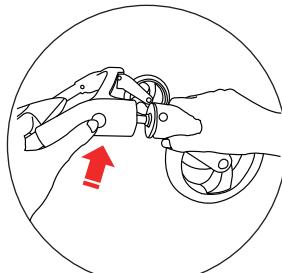


Harness Adjustment

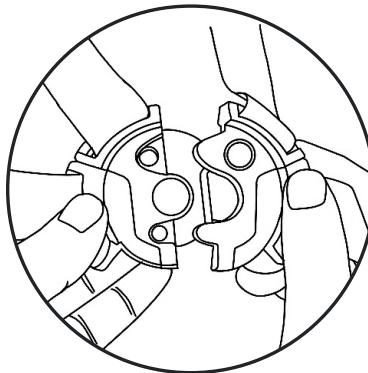

Buckle up

Place together and join magnetic parts, and place part with buttons on top.
As below until you hear a click.

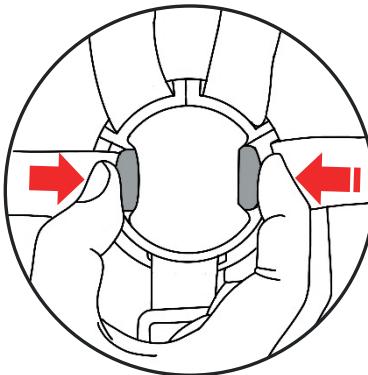

Releasing the buckle


Press in buttons and lift to release the 5-point magnetic buckle.

Harness Shoulder height adjustment: Unfasten the harness shoulder straps so that the two short straps dangle from the seat backrest. Insert your hand under the seat back cover and access the buckle on the back of the seat back. Thread the buckle from the seat back through to the front. Reposition the strap to the desired position and replace by reversing the removal procedure. Re attach the harness for use and adjust the strap length to suit the child.


The length of the shoulder straps and the crotch strap can be adjusted by sliding the buckles and shortening or lengthening the straps.

Canopy & calf rest adjustment

1. Canopy adjustment: Pull the sun canopy forward to open it - unzip the canopy to extend it further and push it backward to retract.

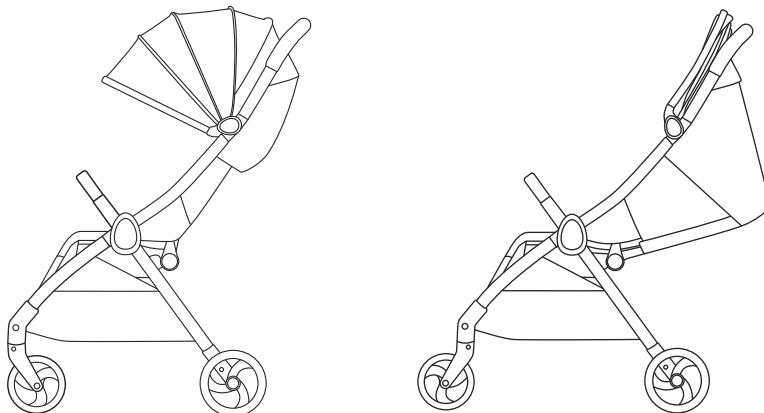

2. Calf rest adjustment: Pull the lever underneath the calf rest to adjust its angle.

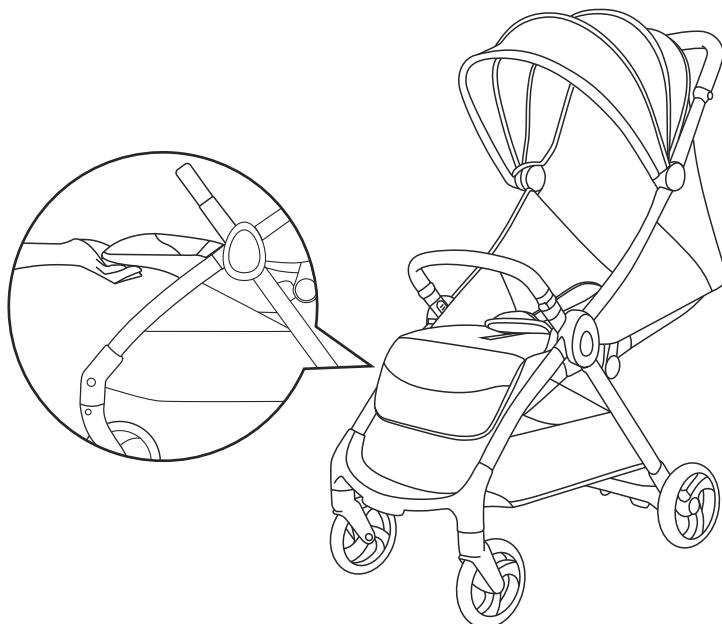

CARE AND MAINTENANCE

- Regularly check screws, rivets, bolts and fastenings to ensure they are locked tight and secure. Replace any parts in an inferior condition. When using this product during the winter, by the sea or off road it is important to clean using fresh water and dry thoroughly. Salt water and salt and grit from the roads will corrode metal parts unless removed.
- Check on a regular basis that all chassis locking devices are working correctly.
- If any part of the product is damaged, contact your local egg retailer immediately without using the pushchair.
- Do not expose the product to excessive sunlight, even normal exposure to sunlight may cause change to the colour of the fabrics.
- Take care not to tear fabrics when transporting the stroller.
- Light oil or petroleum jelly (vaseline) can be used to lubricate moving parts. Periodically remove the rear wheels; clean, lubricate and replace.
- Ensure all zips are either fully open or closed to prevent damage.
- Always use the rain cover in inclement weather.
- Do not place items on top of the hood/canopy, it could damage the fabrics or render the product unsafe.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides of the stroller will affect the stability of the stroller.
- Tyres can leave marks on some surfaces such as vinyl flooring or carpet.
- Fabrics should only be cleaned in accordance with the care labels.
- Do not place fabrics in a washing machine, hand wash or sponge clean only using mild detergent and warm water (30°C).

WARRANTY POLICY

KEEP YOUR ORIGINAL RECEIPT OF PURCHASE SAFE WITH YOUR WARRANTY INFORMATION

It will be required should you unfortunately find a defect. The receipt must show the date of purchase clearly. In the first instance you must contact the original place of purchase. Repairs to any part of this product do not extend the warranty period. Do not return your product direct to the manufacturer.

SERVICING OF YOUR EGGZ STROLLER

We recommend that this product is regularly maintained and is serviced by a BabyStyle authorised dealer at least every 12 months. Only replacement parts supplied or recommended by the manufacturer/distributor shall be used.

DISCLAIMER

Whilst we believe the information set out in this instruction manual to be correct and reliable at the time of print, we do not accept responsibility for its accuracy and we shall not be liable for its interpretation and its use. We reserve the right to change, modify, add or delete product specifications at any time without prior notice.

YOUR WARRANTY POLICY

At BabyStyle, we guarantee your product has been manufactured in accordance with all current European safety standards which are applicable to this product, and that this product is free from any defects in workmanship and material at the time of purchase. During the production process this product has gone through rigorous quality checks. Despite our efforts, if this product does show a manufacturing or material defect within the 24 months warranty period for the chassis and seat frames and 6 months seat fabrics and PVC rain cover, we will comply to the warranty terms and conditions providing the product has been used for normal use as described within the instruction manual and it has been serviced and maintained correctly as described in the instruction manual, for further information please contact the place of purchase. Please retain your original receipt of purchase safely.

WARRANTY TERMS

- Chassis: 24 consecutive months.
- Fabrics, accessories and PVC rain cover: 6 consecutive months.
- The warranty only applies to the original purchaser and is non-transferable.

The warranty will be invalidated in the following circumstances:

- The product has not been used for its intended purpose as described within the instruction manual.
- If the product is returned for repair through a dealer not authorised by us.
- If the original receipt of purchase cannot be provided.
- If the defect is as a result of improper use or incorrect maintenance, negligence or impact damage.
- If the parts show normal wear and tear that may be expected from daily use of the product (wheels, rotating or moving parts etc).
- The warranty of this product becomes valid from the date of purchase as stated on the original receipt of purchase. This does not affect your statutory rights.

Register your product today at eggstroller.com

We are proudly part of the



egg[®]

36 Charles Street, Sileby,
Leicestershire LE12 7RJ.

T: 01509 816444
E: info@eggstroller.com
www.eggstroller.com