



MB170

Pushchair

GB Instruction Manual

ES Manual de instrucciones



IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Welcome to the familiee


Your trust in our product means the world to us, and we're thrilled to be a part of your parenting journey. Our team has worked tirelessly to ensure that the MB170 provides comfort, safety, and style for you and your little one. We're confident it will exceed your expectations. Should you have any questions or require assistance in the future, please don't hesitate to reach out. Thank you for choosing My Babiie; we wish you and your family countless wonderful journeys ahead.

Get to know your MB170 Pushchair

Scan the QR code below on your camera app to be linked off to our page to get all the information you need for using your pushchair. From setting it up to how to fold it down, it's all there!



SCAN ME

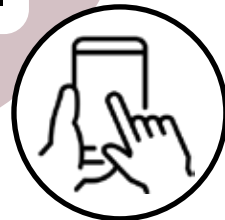

Warranty

We provide a 1 year warranty against manufacturing or material defects.

The warranty period is effective from the day of purchase and applicable to the UK and Ireland. If you made your purchase from an authorised retailer, please return your product to them.

If you bought your product via our website; mybabiie.com, please contact our Customer Service team via email (info@mybabiie.com). We are happy to refund any product if you change your mind about your purchase (if purchased from our website, mybabiie.com.) As long as you tell us within 30 days of receiving your goods. They must be returned in an unused condition, in the original, undamaged packaging and complete with all original parts and accessories. Proof of purchase is required.

What is not covered by the Guarantee?

- Failure to follow My Babiie user guide and maintenance instructions.
- Damage caused by non domestic use
- General wear and tear, for example: worn wheels, damaged rain covers, worn/torn fabric.
- Deliberate damage, misuse or neglect.
- Product which has been modified, undergone an unauthorised repair or used a non approved spare part.
- Cosmetic damage.
- Parts subject to normal wear and tear, foam handles, rubber elements of wheels, signs of fabric wear.
- Loss incurred as a result of not being able to use a product whilst waiting for a spare part or repair.

A repair service is available for any item that sustains accidental damage at any point during its lifespan. If the damages are not covered by our guarantee, we will provide a quote for the repair costs on an individual basis. If you find yourself in need of spare parts that are not covered by the warranty, you can purchase each spare part on our website (subject to availability).

To read more about your guarantee, please visit mybabiie.com/guarantee.

Our guarantee is provided by My Babiie Retail Ltd: Suite 188, Stockiie Business Centre, Unit A, St. James Business Park, Henwood Ind. Estate, Henwood, Ashford TN24 8DH

Your statutory rights are not affected by the guarantee.

Registering your Warranty

To register your warranty please visit www.mybabiie.com/warranties

Registering for your product warranty allows you to claim repairs or replacements if your product develops a fault. It will also help us contact you in the event of a product issue that you may need to be made aware of.

Problems or Questions

If you have any questions about your product then please drop us an email at info@mybabiie.com and we will get back to to you as soon as possible. Alternatively, you can chat to us on our Live Support Chat on our website mybabiie.com or contact us via our social media channels.

Pushchair warnings

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

Please read these instructions carefully before use and keep them for later reference.

Remove all packaging and non-permanent labels and dispose of safely before using this product. The safety of your child could be put at risk if you do not follow these instructions.

This stroller is designed for 1 child from 0 months up to a weight of 22 kg/36 months.

WARNING: Never leave your child unattended.

WARNING: Uneven or excessive loading of items on or in the stroller may cause the product to tip and may cause injury.

WARNING: Maximum intended weight within the shopping basket is 3kg.

WARNING: Ensure that all the locking devices are engaged before use.

WARNING: To avoid injury ensure that your child is kept away when unfolding and folding this stroller.

WARNING: Do not let your child play with this stroller.

WARNING: Always use the restraint system.

WARNING: Check that the pram body or seat attachment devices are correctly engaged before use.

WARNING: Do not put hot drinks or liquids in the cup holder.

WARNING: This product is not suitable for running or skating.

WARNING: Do not insert any additional mattresses into the stroller.

WARNING: Accessories which are not approved by the manufacturer shall not be used.

WARNING: This pushchair has been designed for one child and shall be used for the transport for only one child!

WARNING: Always use the crotch strap in combination with the waist belt.

WARNING: This stroller does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.

WARNING: Only replacement parts supplied or recommended by My Babiie shall be used.

WARNING: Any load attached to the handle and on the back of the backrest and on the sides of the stroller will affect the stability of the stroller.


WARNING: The parking device shall be engaged when placing and removing the children.

WARNING: Use the seat in the most reclined position for newborn children until they can support their own head.


EN 1888-1 & 2: 2018+A1: 2022 approved

Parts


Frame

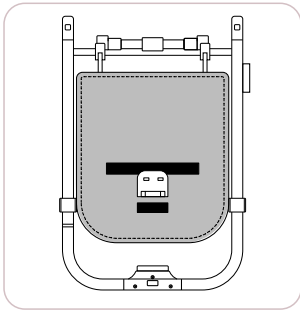


Canopy

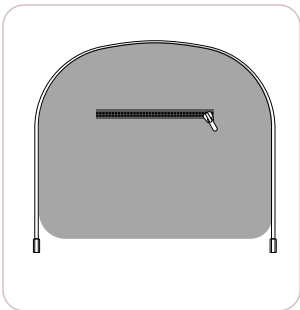


Bumper bar

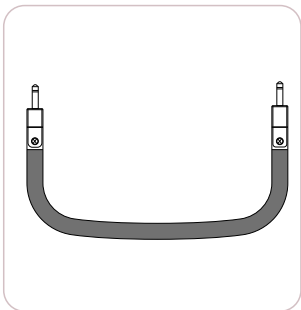


Front wheel (x2)

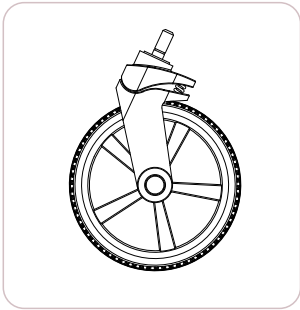


Rear wheel (x2)

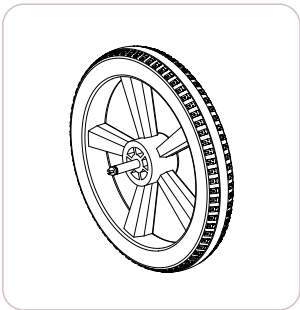


Cup holder

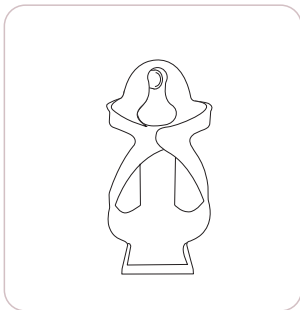

Footmuff




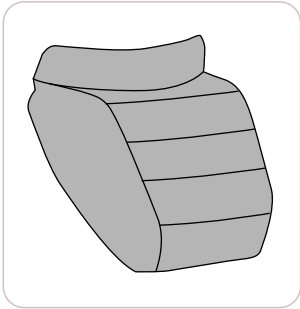


Raincover

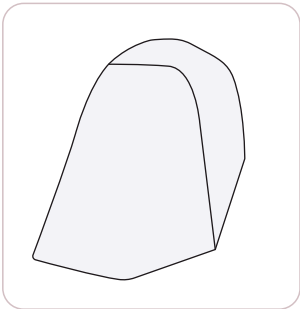

Open the pushchair


Push the lock outward, as shown in the picture, while simultaneously pulling up the handle with your other hand to unfold the stroller.

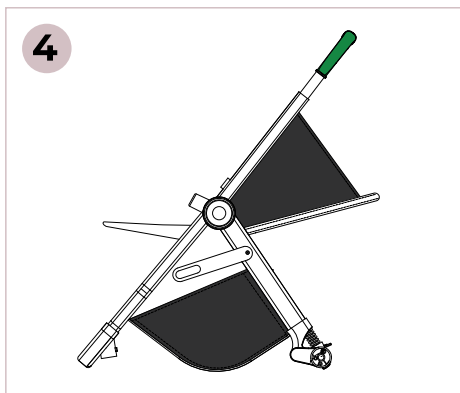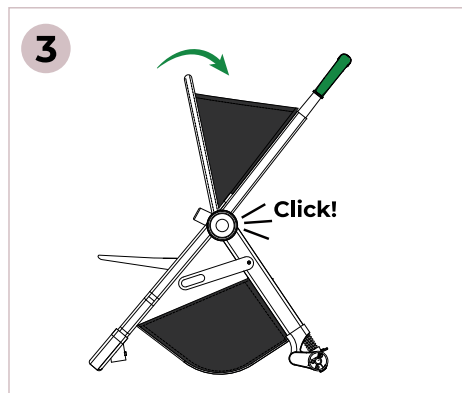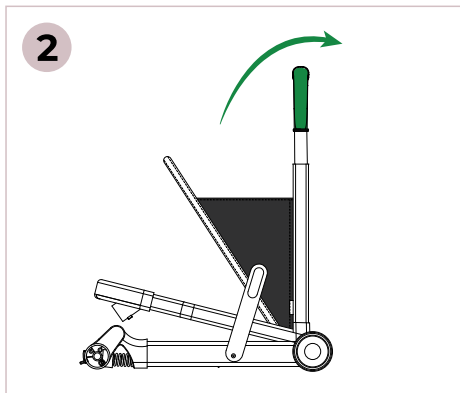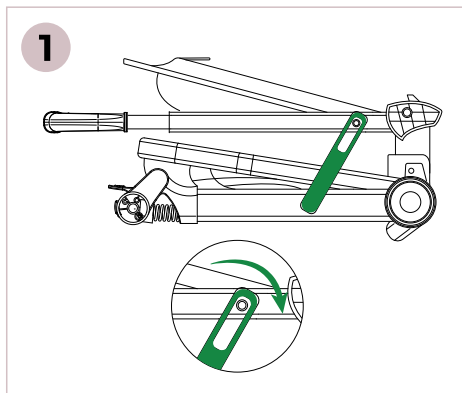

Assemble/Disassemble the bumper bar


1

Insert the bumper on both sides of the seat as picture.

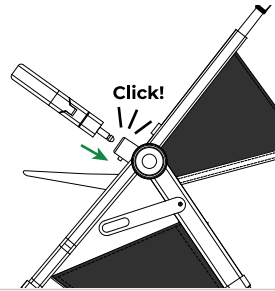

2


Press and hold the button to remove the front bumper.

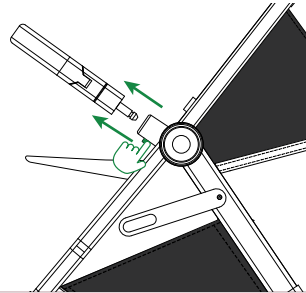

3





The bumper can rotate 360 degrees.

Note: please make sure to lock the bumper in place when you heard a "click" sound.

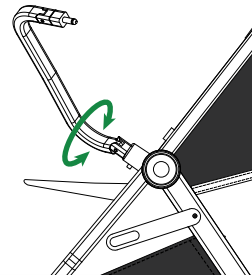

Assemble the canopy


Insert the hood's plastic piece into the plastic fitting on the frame, then pull out the canopy tube to open it. To fully extend and enlarge the canopy, unzip the zipper puller.

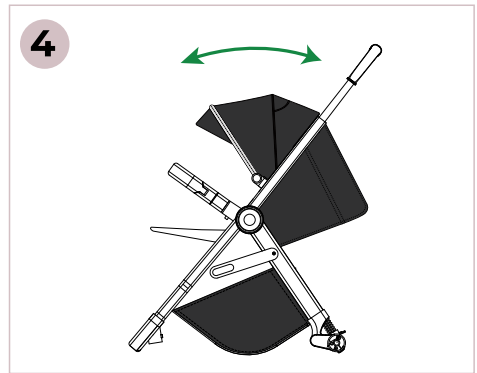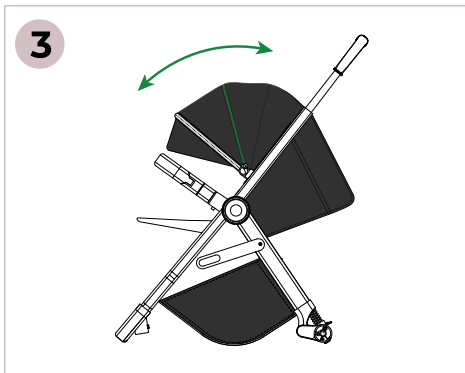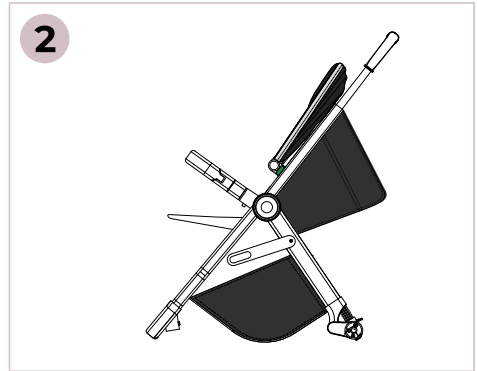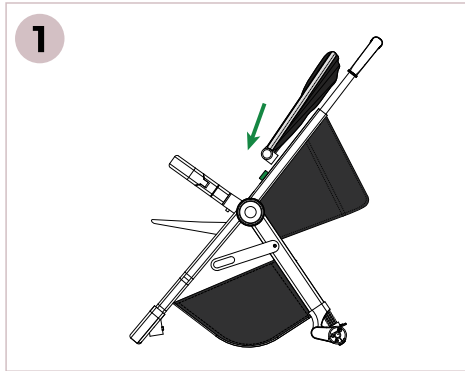

Telescopic handle bar

1


Press the button, highlighted, in the centre of the push handle to move the handle to your desired position.

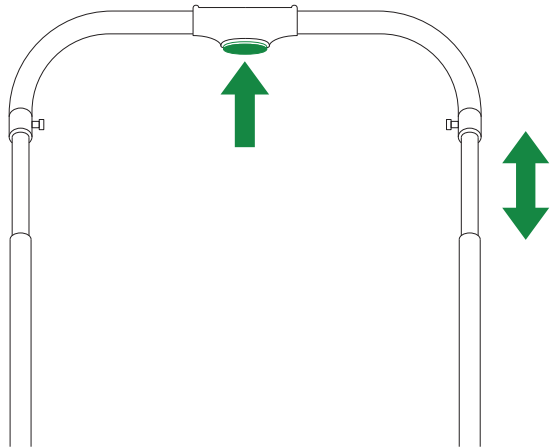


Adjust the footrest

Pull the plastic button on the back side of the footrest to adjust its position. There are 3 positions to choose from.

1

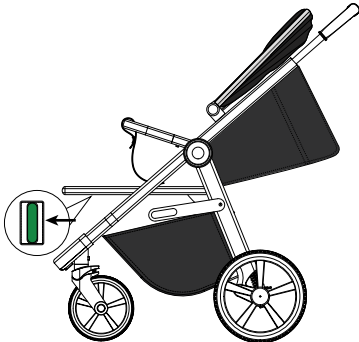

2

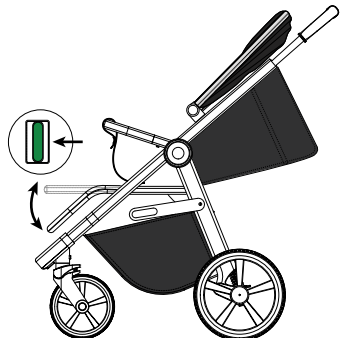

Adjust the backrest

Pull up the plastic button on the back of the backrest and adjust it to one of three positions: sleeping or seated.




Assemble / Disassemble the front wheels

Insert the front wheels by placing the vertical shaft into the plastic hole on the wheel housing until you hear a 'click.' Ensure they are securely locked in place.



To remove the wheel press the small plastic button and pull out the front wheel. the front wheels.

There is a rotation button on the back of the plastic housing. When set to 'OFF' in the up position the front wheels can rotate 360 degrees. When set to 'ON', in the down position the front wheels lock in the forward position and cannot rotate.

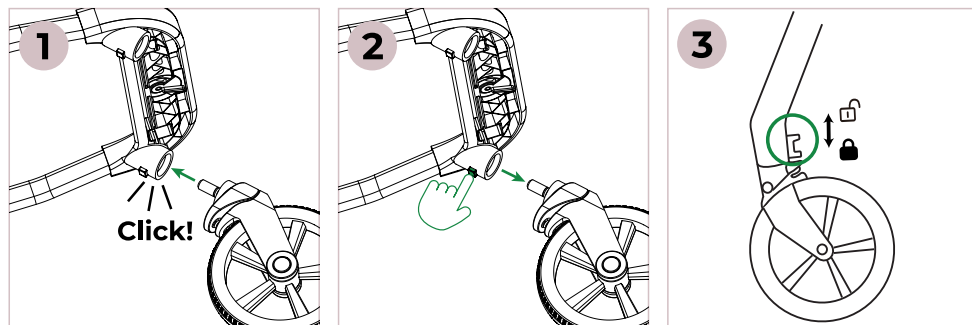


Assemble / Disassemble the rear wheels

Insert the rear axle into the plastic hole on the rear axle until you hear a 'click,' ensuring it is securely locked. To remove the rear wheel, press the small plastic button while pulling the wheel in the direction of the arrow.

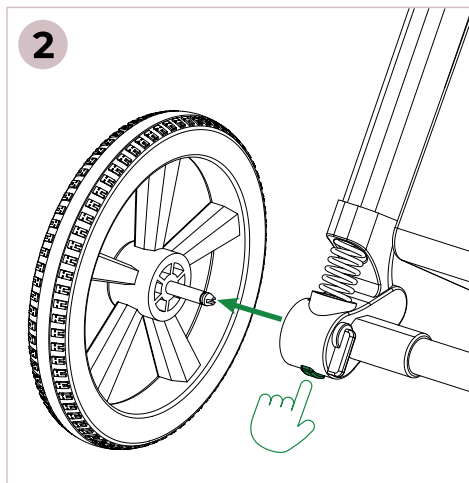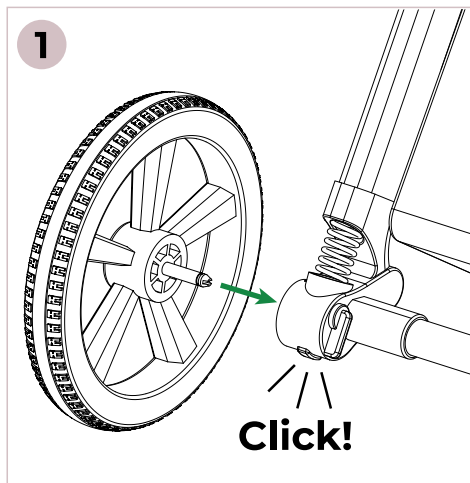




Using the brake

Step down on the brake pedal to apply the brake. Lift up the brake pedal to release it.

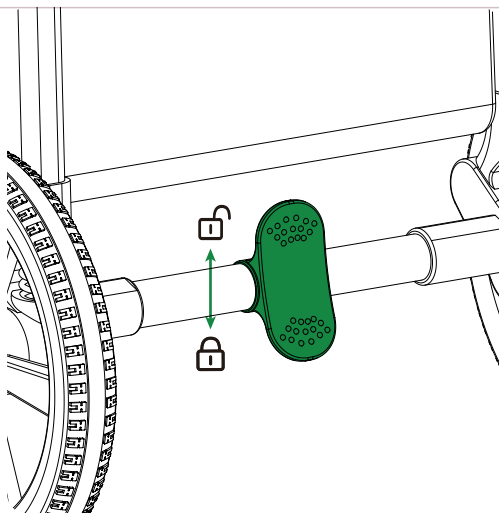


Fold the pushchair

Press the lock button (1) and the folding button (2) on the handle simultaneously, as shown in picture 1. Then, push the handle forward in the direction of arrow until you hear a 'click,' indicating the stroller is unlocked. The seat will then fold forward, as shown in picture 2. Use your other hand to pull up the handle under the seat to complete the folding process, as shown in picture 3.

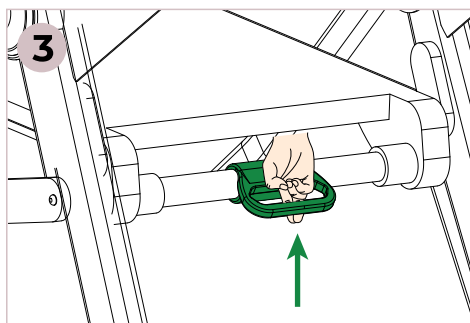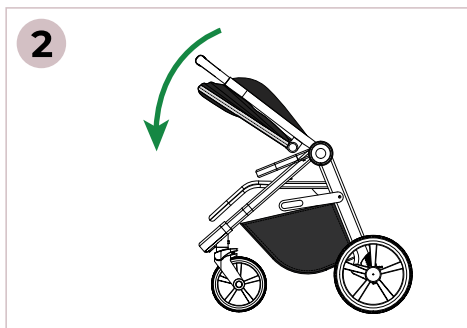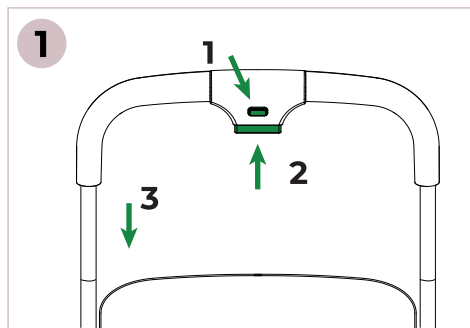


Safety buckle

Assemble the safety buckle as shown by the arrow.
Press the middle button to release the buckle.
Adjust the seat belt length by pulling the safety straps on both sides.

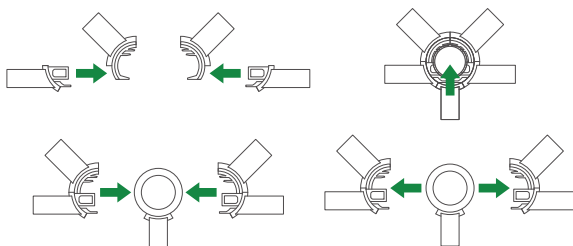

There are 2 position for the safety belt, the top position is suitable for children older than 6 months, the bottom position is suitable for children under 6 months.

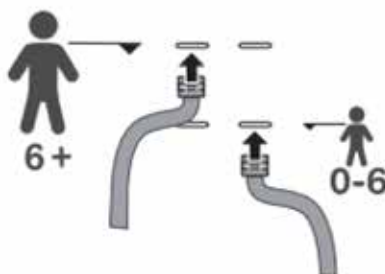

Care and maintenance

- Please check on a regular basis that the brakes, wheels, latches, connecting elements, belt systems and seams are properly functional.
- Do not expose the stroller to strong sunshine.
- Sponge clean only.
- After use in rain or snow, the wheels should be lubricated and the stroller dried to prevent rust.
- Care for, clean and check this stroller regularly.
- Do not use accessories that have not been approved by the manufacturer.

Your child's safety is your responsibility

If you have a problem with this product or require replacement parts, please visit www.mybabiie.com/support


Register your product at: www.mybabiie.com/warranties

Pushchair Do's & Don'ts



Do use your brakes!

Ensure the parking brake is engaged during the loading and unloading of children & when the pushchair is stationary.

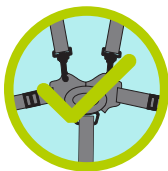


Do always use the restraint system!

Ensure that the child restraint system is correctly fitted at all times.



Do keep your pushchair clean and dirt free.

Use a clean white cloth, warm water and a mild detergent to keep your pushchair clean.

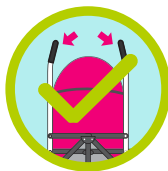

Do always keep two hands on the handles when pushing.

You could lose control of your pushchair if not steering with both hands.



Do follow manufacturers instructions when assembling and using your pushchair.

For safety, please refer to our instruction manuals or contact customer support if you're unsure.



Don't use your pushchair up and down stairs!

Don't use your pushchair up or down stairs or to bump kerbs.



Don't hang bags off the handles!

Bags and other items should not be hung from the handles as this can affect the stability of the pushchair.



Don't run or skate with your pushchair!

Our products are not suitable for running or skating.



Don't carry the stroller with baby inside!

Our pushchairs are not designed to be carried with your baby inside them.



Don't put hot drinks in the cup holder.

Hot drinks burn and can easily spill from the bottle holder.



Don't jetwash your pushchair.

Some jet washers are very powerful and could damage parts of your pushchair!



Don't leave your child un-attended in their pushchair.

Always keep your child and pushchair in view to avoid accidents.



Don't treat your pushchair like a trolley.

Don't load your pushchair up with all your shopping as they are not built for this purpose and could cause damage.



Don't use your pushchair as a bumper cart!

Damage can easily occur if your pushchair is knocked into other things.



Don't smoke around your pushchair.

We wouldn't want your pushchair or little one getting hurt or damaged!



Don't leave your pushchair unattended on extreme gradients.

Even with your brakes on your pushchair is at risk from tipping or sliding on extreme gradients!



Don't sit in the pushchair unless the user is under the guideline weight.

Our pushchairs are designed to hold a maximum weight. If exceeded this will cause damage!



Do enjoy your My Babiie product!

Go out and have fun adventures with your little one!

Notas de seguridad y cuidado

IMPORTANTE - LEA CUIDADOSAMENTE Y GUARDE ESTAS INSTRUCCIONES PARA FUTURAS CONSULTAS

Retire todo el embalaje y las etiquetas no permanentes y deséchelos de manera segura antes de usar este producto. La seguridad de su hijo podría correr peligro si no sigue estas instrucciones. Este cochecito está diseñado para 1 niño desde 0 meses hasta un peso de 22 kg.

ADVERTENCIA: Nunca deje al niño desatendido.

ADVERTENCIA: La carga desigual o excesiva de artículos sobre o dentro de la carriola puede hacer que el producto se vuelque y cause lesiones.

ADVERTENCIA: El peso máximo previsto dentro de la cesta de la compra es de 3 kg.

ADVERTENCIA: Asegúrese de que todos los dispositivos de bloqueo estén activados antes de su uso.

ADVERTENCIA: Para evitar lesiones, asegúrese de que el niño se mantenga alejado al desplegar y plegar este cochecito.

ADVERTENCIA: No permita que el niño juegue con este producto.

ADVERTENCIA: Utilice siempre el sistema de retención.

ADVERTENCIA: Verifique que el cuerpo del cochecito esté correctamente acoplado antes de su uso.

ADVERTENCIA: No coloque bebidas o líquidos calientes en el portavasos.

ADVERTENCIA: Este producto no es apto para correr o patinar.

ADVERTENCIA: No inserte colchones adicionales en la carriola.

ADVERTENCIA: No se deben utilizar accesorios que no estén aprobados por el fabricante.

ADVERTENCIA: ¡Este cochecito ha sido diseñado para un niño y debe usarse para el transporte de un solo niño!

ADVERTENCIA: Utilice siempre la correa de la entrepierna en combinación con el cinturón.

ADVERTENCIA: Este cochecito no reemplaza una cuna o una cama. Si su hijo necesita dormir, debe colocarlo en una cuna o cama adecuada.

ADVERTENCIA: Solo se deben utilizar piezas de repuesto suministradas o recomendadas por My Babiie.

ADVERTENCIA: Cualquier carga adherida a la manija y en la parte posterior del respaldo y en los costados de la carriola afectará la estabilidad de la carriola.

ADVERTENCIA: El dispositivo de estacionamiento debe estar activado al colocar y retirar a los niños.

EN 1888-1:2018+A1:2022 y EN 1888-2:2018+A1:2022 aprobado

Cuidado y mantenimiento

- Compruebe periódicamente que los frenos, las ruedas, los pestillos, los elementos de conexión, el cinturón
los sistemas y las costuras funcionan correctamente.
- No exponga el cochecito a la luz solar intensa.
- Solo limpie con esponja.
- Después de su uso bajo la lluvia o la nieve, se deben lubricar las ruedas y secar la carriola para evitar la oxidación.
- Cuide, limpie y revise este cochecito regularmente.


La seguridad de tu hijo es tu responsabilidad

Si tiene un problema con este producto o necesita piezas de repuesto, visite www.mybabiie.com/support


Registre su producto en: www.mybabiie.com/warranties

Piezas de cochecitos


Marco de cochecito

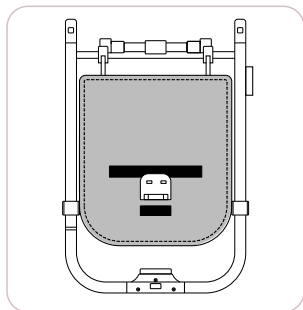


Pabellón

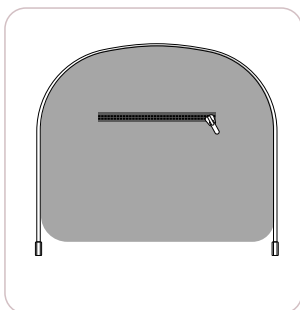


Barra de parachoques

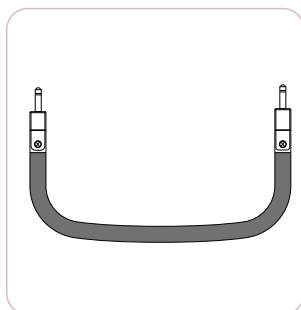


Rueda delantera (x2)

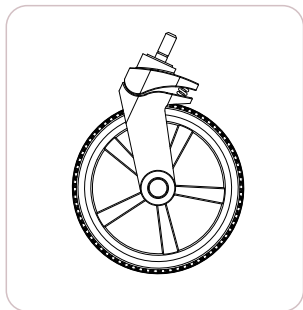


Rueda trasera (x2)

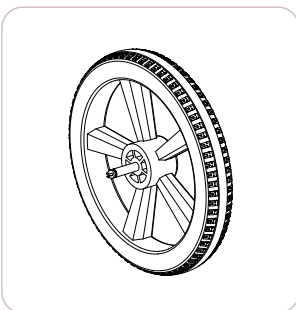


Portavasos

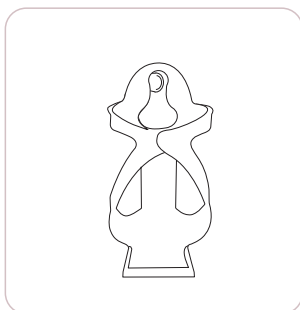

Saco de pies




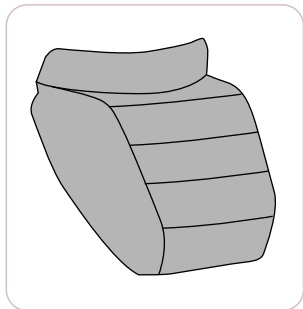


Cubierta para la lluvia

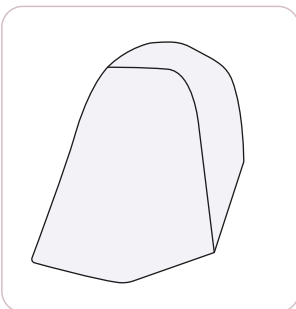

Abrir el cochecito


Empuje el bloqueo hacia afuera, como se muestra en la imagen, mientras tira simultáneamente hacia arriba del mango con la otra mano para desplegar el cochecito.

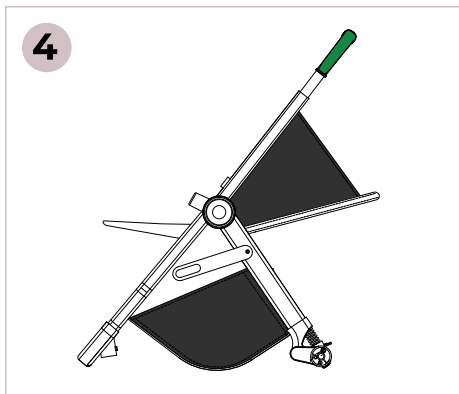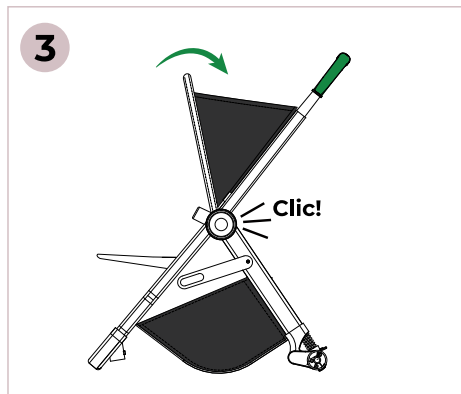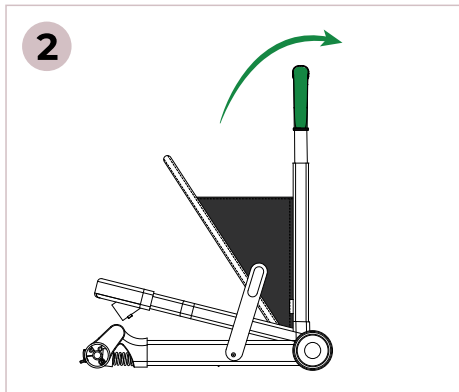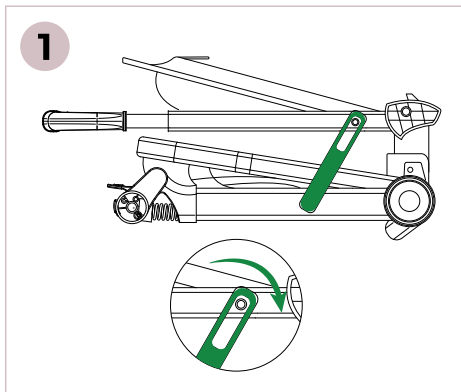

Montar/desmontar la barra de parachoques


1

Inserte el parachoques en ambos lados del asiento como se muestra en la imagen.

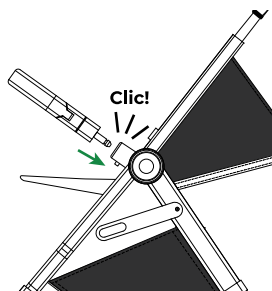

2


Mantenga presionado el botón para quitar el parachoques delantero.

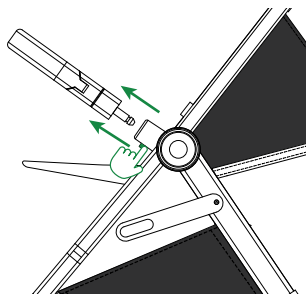

3





El parachoques puede girar 360 grados.

Nota: asegúrese de bloquear el parachoques en su lugar cuando escuche un sonido de "clic".

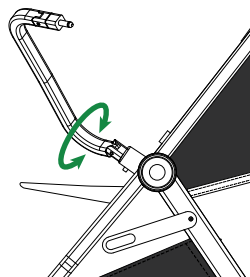

Montar el dosel


Inserte la pieza de plástico de la capota en el accesorio de plástico del marco y luego tire del tubo de la capota para abrirla. Para extender y agrandar por completo la capota, abra el tirador de la cremallera.

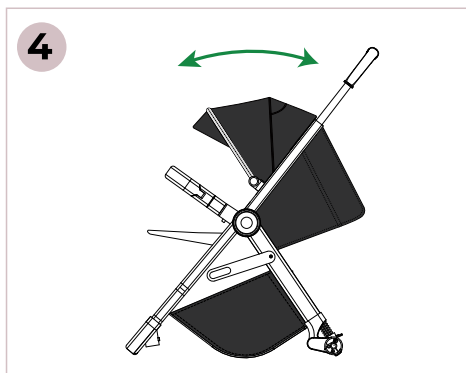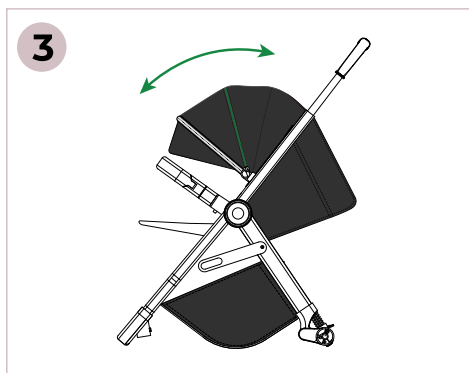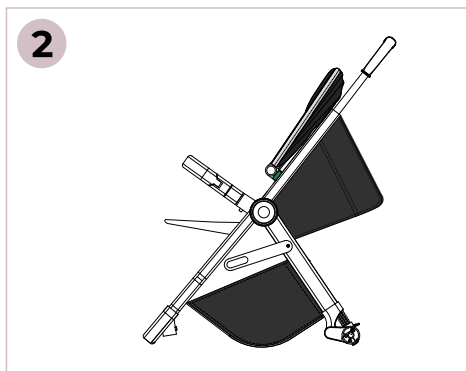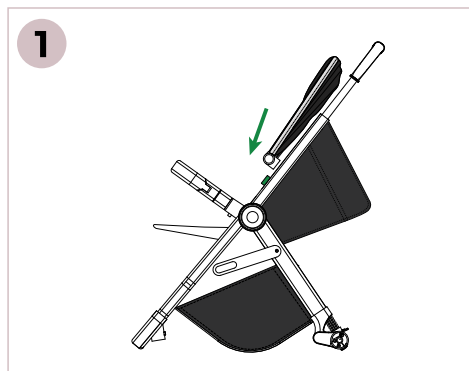

Manillar telescópico

1


Presione el botón resaltado en el centro del mango de empuje para mover el mango a la posición deseada.

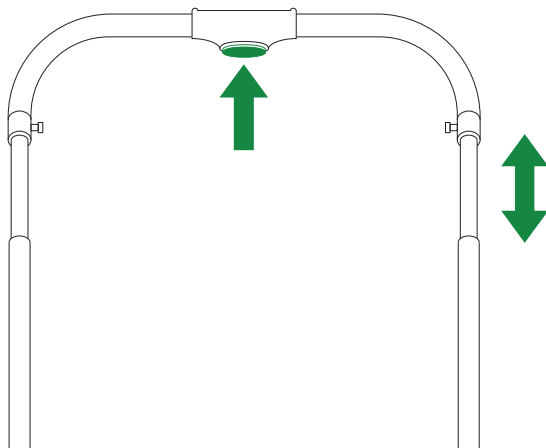


Ajuste el reposapiés

Tire del botón de plástico que se encuentra en la parte posterior del reposapiés para ajustar su posición. Hay 3 posiciones para elegir.

1

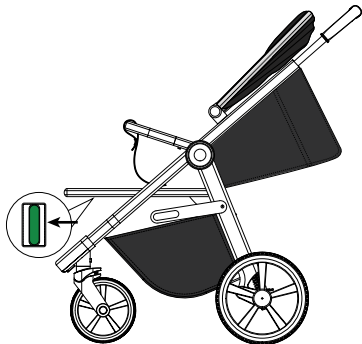

2

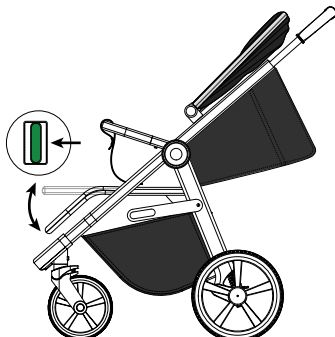

Ajuste el respaldo

Levante el botón de plástico en la parte posterior del respaldo y ajústelo a una de tres posiciones: durmiendo o sentado.




Montar/Desmontar las ruedas delanteras

Inserte las ruedas delanteras colocando el eje vertical en el orificio de plástico de la carcasa de la rueda hasta que escuche un "clic". Asegúrese de que estén bien bloqueadas en su lugar.



Para quitar la rueda, presione el pequeño botón de plástico y tire de la rueda delantera.

Hay un botón de rotación en la parte posterior de la carcasa de plástico. Cuando se configura en "OFF" en la posición superior, las ruedas delanteras pueden girar 360 grados. Cuando se configura en "ON", en la posición inferior, las ruedas delanteras se bloquean en la posición delantera y no pueden girar.

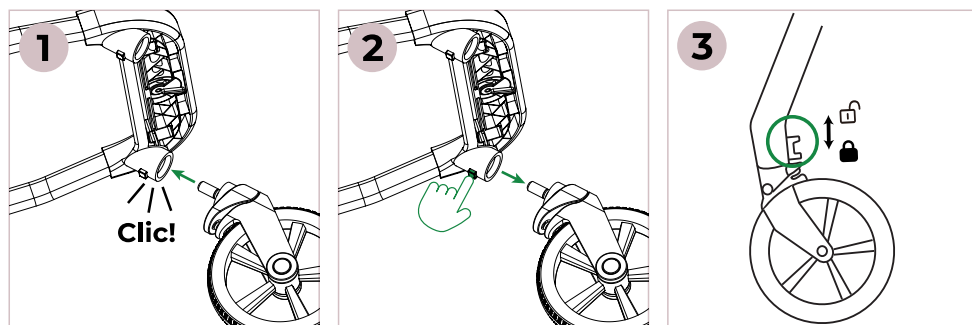


Montar/Desmontar las ruedas traseras

Inserte el eje trasero en el orificio de plástico del eje trasero hasta que escuche un "clic", lo que garantiza que esté bien bloqueado. Para quitar la rueda trasera, presione el pequeño botón de plástico mientras tira de la rueda en la dirección de la flecha.

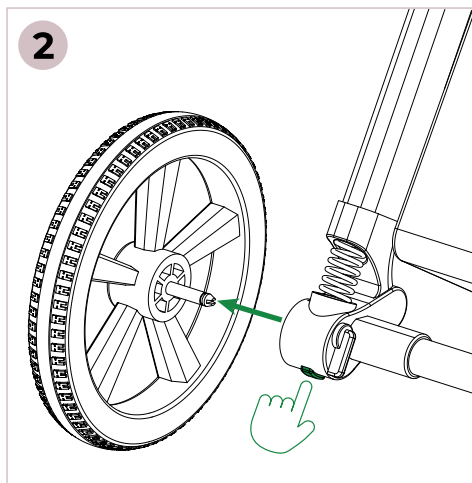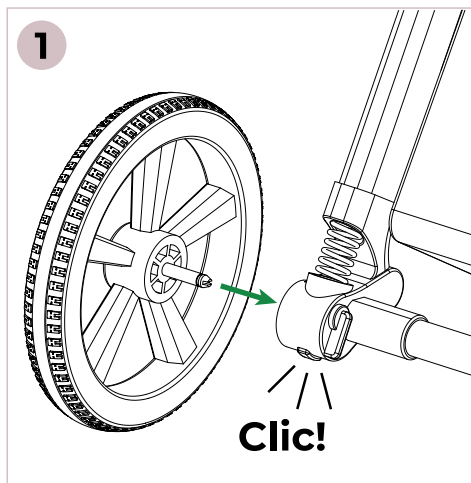




Usando el freno

Pise el pedal del freno para aplicar el freno. Levante el pedal para soltarlo.

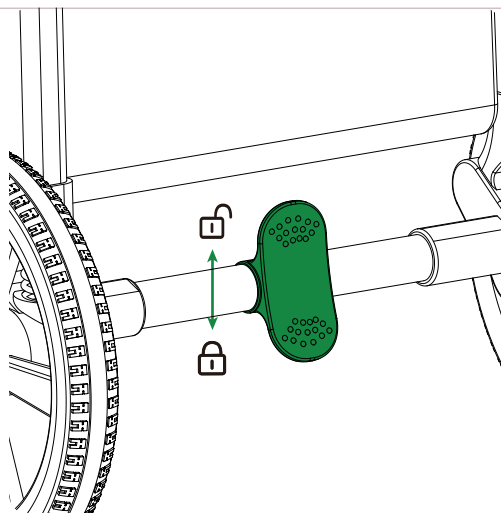


Plegar el cochecito

Presione el botón de bloqueo (1) y el botón de plegado (2) en el mango simultáneamente, como se muestra en la imagen 1. Luego, empuje el mango hacia adelante en la dirección de la flecha hasta que escuche un "clic", lo que indica que el cochecito está desbloqueado. El asiento se plegará hacia adelante, como se muestra en la imagen 2. Use la otra mano para levantar el mango debajo del asiento para completar el proceso de plegado.

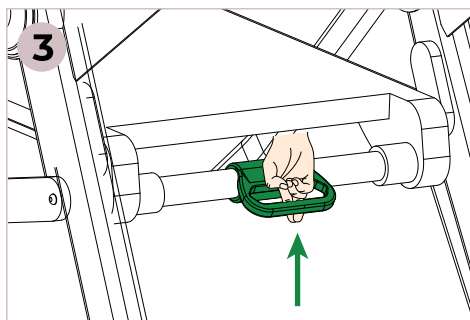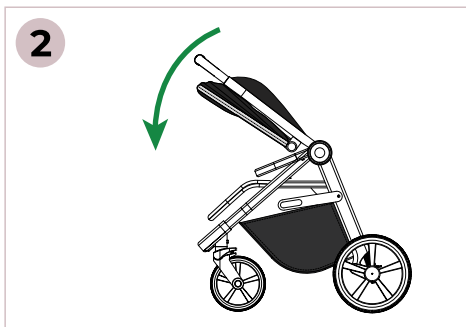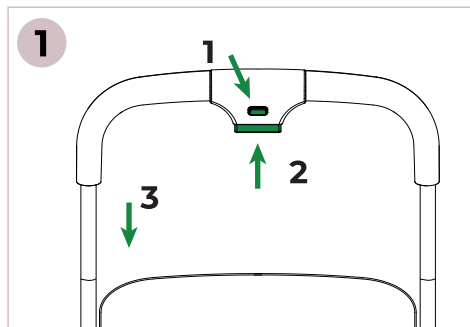


Hebilla de seguridad

Coloque la hebilla de seguridad como lo indica la flecha. Presione el botón central para soltar la hebilla. Ajuste la longitud del cinturón de seguridad tirando de las correas de seguridad de ambos lados.

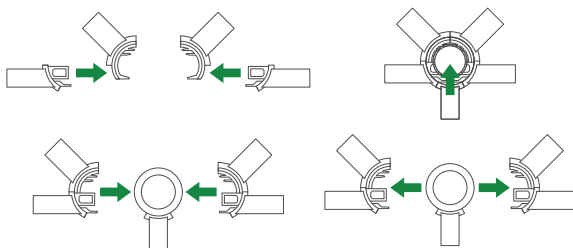

Hay 2 posiciones para el cinturón de seguridad: la posición superior es adecuada para niños mayores de 6 meses y la posición inferior es adecuada para niños menores de 6 meses.

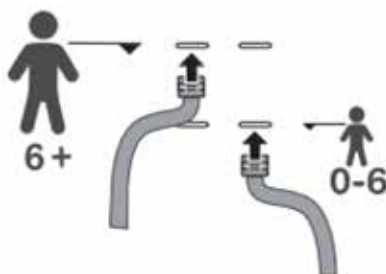


Cuidado y mantenimiento

- Compruebe periódicamente el correcto funcionamiento de los frenos, las ruedas, los cierres, los elementos de conexión, los cinturones y las costuras.
- No exponga la carriola a la luz solar directa.
- Límpiela solo con esponja.
- Después de usarla bajo la lluvia o la nieve, lubrique las ruedas y seque la carriola para evitar la oxidación.
- Cuide, limpie y revise esta carriola periódicamente.
- No utilice accesorios no aprobados por el fabricante.

La seguridad de su hijo es su responsabilidad.

Si tiene algún problema con este producto o necesita piezas de repuesto, visite www.mybabiie.com/support

Registre su producto en: www.mybabiie.com/warranties

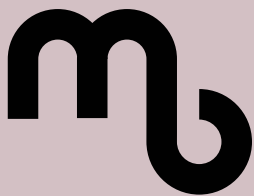

Register your product



www.mybabiie.com/warranties



www.mybabiie.com/registro

In the first instance of needing assistance please
contact your original place of purchase.

This product qualifies for 12 month warranty
when registered through our website

mybabiie.com



My Babiie



@MyBabiieOfficial



My Babiie



@mybabiie_official