


Oyster 4

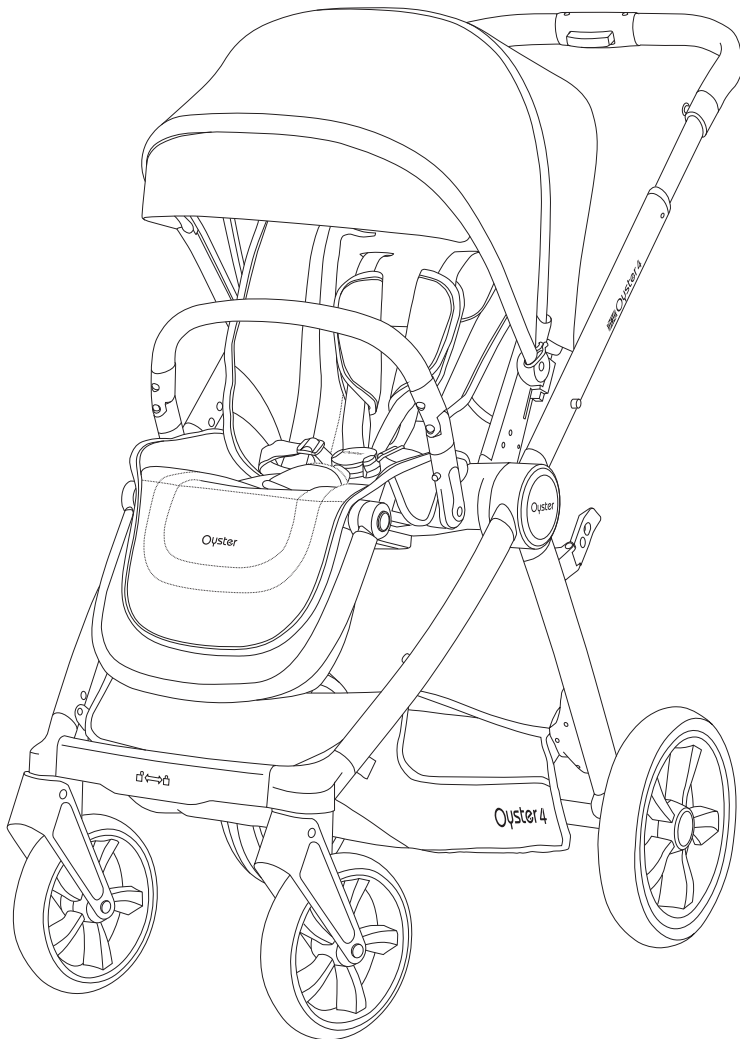

INSTRUCTION MANUAL

SCAN TO REGISTER
YOUR WARRANTY



CONTENTS

- 4 Important information and warnings
- 8 Stroller overview
- 10 Fitting and removing of front wheels
- 10 Fitting and removing of rear wheels
- 11 Locking and unlocking the front swivel wheels
- 11 Opening the chassis with the seat unit
- 12 Folding the chassis with the seat unit fitted
- 14 Folding the chassis with the seat unit / carrycot / car seat removed
- 14 Adjusting the handle height
- 15 Using the parking brake
- 15 Fitting and removing the bumper bar
- 15 Fitting and removing the seat unit
- 16 Adjusting the seat unit backrest
- 16 Adjusting the calf rest
- 17 Using the hood/sun canopy
- 18 UPF indicator
- 19 Adjusting the hood/canopy/harness shoulder height
- 19 Using the restraint system
- 21 Fitting the stroller rain cover
- 21 Fitting the footmuff
- 22 Assembling the carrycot
- 22 Fitting the carrycot apron

- 22 Fitting the carrycot to the chassis
- 23 Removing the carrycot
- 24 Adjusting the carrycot hood
- 24 Rocking/stabilising carrycot
- 24 Fitting the carrycot rain cover
- 25 Fitting the Oyster capsule car seat to the chassis
- 26 Removing the Oyster capsule car seat from the chassis
- 27 Fitting and removing the tandem adaptors
- 28 Fitting and removing rear wheel guard
- 28 Fitting and removing the tandem seat units
- 29 Fitting and removing the tandem carrycots
- 30 Fitting and removing the tandem car seat adaptors
- 31 Fitting and removing the tandem car seats
- 32 Approved tandem configurations
- 36 Oyster basket configurations
- 38 Using the Oyster Ride-On board
- 39 Oyster Ride-on board configurations
- 40 Fitting the carrycot to the Oyster carrycot stand
- 43 Care and maintenance
- 44 Warranty Policy
- 45 Warranty Terms

IMPORTANT - READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Important Safety Information

- Single seat mode: This mode (single seat) is suitable for children from newborn to 4 years or up to a maximum weight of 22kg, whichever comes first. With a car seat attached birth to 13kg, with a carrycot attached birth to 9kg.
- The seat unit, carrycot or car seat is suitable for one child only to the maximum weight stated above.
- Tandem seat mode: This mode (tandem seat units) is suitable for children from newborn to 3 years or up to a maximum weight of 15kg, whichever comes first.
- As a tandem vehicle two children.
- Oyster ride-on board max 20kg. Not suitable in conjunction with tandem configurations.
- It is important that any person intending to use this stroller understands the instructions.



WARNING:

- Never leave your child unattended.
- Ensure that all locking devices are engaged before use.
- To avoid injury ensure that your child is kept away when unfolding and folding this product.
- Do not let the child play with this product.
- Always use the restraint system (safety harness).



WARNING:

- Always use the crotch strap in combination with the waist belt.
- Always check that the pram body/carrycot or seat unit or car seat attachment devices are correctly engaged before use.
- Check the chassis correctly engaged before use.
- Only use the Oyster4 tandem in the configurations as described and illustrated in the Oyster4 instruction manual.
- This product is not suitable for running or skating.
- The maximum weight for the shopping basket is 5kg.
- Never lift/carry the chassis while occupied. Your child's safety may be at risk.
- Do not use the vehicle on steps, stairs or escalators; as it may be dangerous to your child.
- Always descend/mount kerbs on the back wheels, do not tip the stroller forward.
- The parking device shall be engaged when placing and removing children.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle



WARNING:

- Always use the seat in the most reclined position for new born babies to approx. 6 months.
- Never leave the stroller without first engaging the parking device. Avoid uphill or downhill parking.
- Pram body/carrycot: This product is suitable for a child who cannot sit up unaided, roll over and cannot push itself up on its hands and knees. Maximum weight of the child 9kg.
- Incorrect assembly, folding or use of this vehicle may cause damage and affect the safety of the stroller.
- Do not add another mattress on top of the mattress provided or recommended by the manufacturer.
- This vehicle does not replace a cot or a bed. Should your child need to sleep then it should be placed in a pram body, or a cot or bed.
- Do not leave anything in the carrycot that could present a danger of suffocation e.g. non-rigid toys, pillows etc.
- Do not place the carrycot close to another product which could present a danger of strangulation e.g. strings, blinds/curtain cords etc.
- Do not use accessories that are not approved by the manufacturer.



WARNING:

- Do not use replacement parts other than those supplied by the manufacturer or supplier.
- Overheating can endanger the life of the child! Take into account the ambient temperature and the child's clothing and ensure that the child is not too hot or too cold.
- It is recommended you ask a health professional for advice on safe sleeping.
- It is recommended that the carrycot canopy is folded back and the apron - top cover - is removed when the child is sleeping in the carrycot indoors.

The Oyster4 is compatible with the Oyster Carrycot, Oyster4 Tandem Seat and Oyster Capsule Car Seat (with multi car seat adaptors). Only use compatible seat units, pram bodies/carrycots as stated by the manufacturer, otherwise you may be putting the child at risk.


Please check babystyle.co.uk for infant car seat compatibility with other brands.


Manufactured and tested in compliance with
EN1888-1:2018+A1:2022 and EN1888-2:2018+A1:2022

STROLLER OVERVIEW

What's in the box

- Manual
- Chassis with attached basket
- Seat unit with bumper bar
- 2 x front wheels
- 2 x rear wheels
- Rain cover

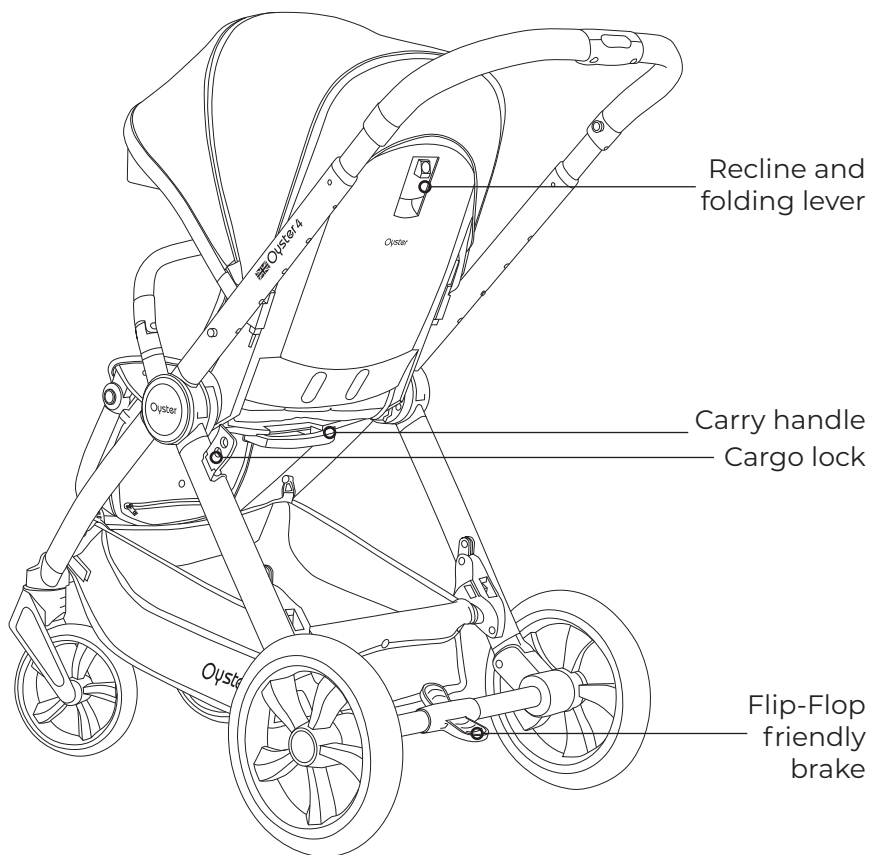

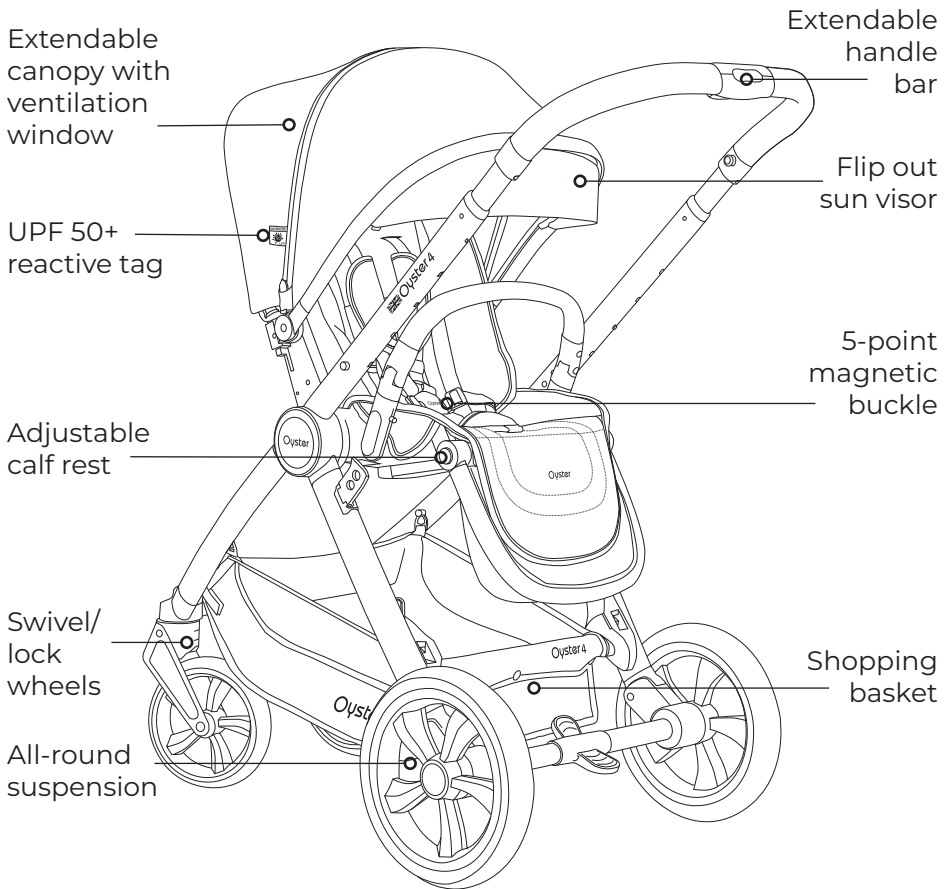

For a full list of features, head to babystyle.co.uk.

The illustrations in this manual are used to demonstrate the operation of the product. Where there are small differences between the physical object and the illustrations, the physical stroller shall prevail.

FITTING AND REMOVING OF FRONT WHEELS

Ensure the swivel lock under the support bar between the front wheels is in the unlock position (see section 4).

1. Push the wheel unit onto the front wheel axle stub until it clicks into position.



2. To remove the wheel; push in the quick release button on the back of the front wheel joint and pull the wheel away from the axle.



FITTING AND REMOVING OF REAR WHEELS

3. Press and hold the button in the centre of the rear wheel and push the wheel into the rear wheel housing; release the button and the wheel should lock in position.

To remove; press and hold the button in the centre of the rear wheel and pull the wheel away from the wheel housing.



LOCKING AND UNLOCKING THE FRONT SWIVEL WHEELS

4. Push the switch left or right under the support bar between the front wheels to lock or unlock the swivel wheels. When locked the front wheels will not be able to swivel and this may help when travelling over uneven surfaces (e.g cobblestones).

NOTE: Lock the wheels in the backwards position when folding, so the stroller free-stands.


OPENING THE CHASSIS WITH THE SEAT UNIT

WARNING: To avoid injury ensure that children are kept away when unfolding and folding this product.

5. Place the chassis in the free standing position.

6. Stand behind the stroller so that the chassis locking clip is on the left hand side. Release the chassis locking clip by pulling the clip away from the frame.

Opening is easiest with the parking brake disengaged.

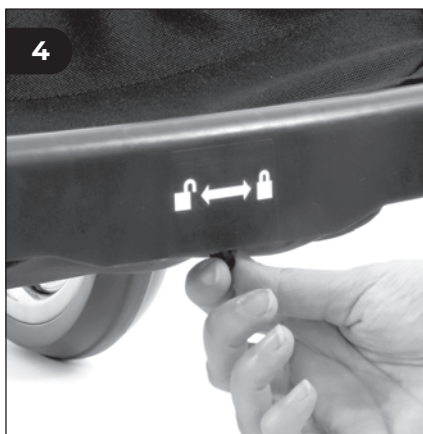

7. Lift the handle up and the front wheels will come out at the same time, until it clicks into place.

8. Lift up backrest until seat unit clicks into position. Pull down the leg rest so it locks into position. Adjust the bumper bar so that it locks into position.

WARNING: Ensure the locking devices are engaged before use.

FOLDING THE CHASSIS WITH THE SEAT UNIT FITTED

NOTE: Before folding, lock the wheels in the backward position, so the stroller free-stands.

NOTE: Before folding, tuck away the sun visor/peak on the canopy.

WARNING: Ensure the child is well clear of moving parts and all items are removed from the shopping basket.

The stroller will fold with the seat unit both forward facing & rearward facing.

9. To fold the chassis with the seat unit rearward facing: first apply the brake then tuck away the sun visor/peak back, then put the canopy/hood back fully to meet the seat.

9.a. Using your thumb, pull down



the lever and then lift up the recline lever to release the seat.

9.b. Push the whole seat back to the handlebar and the stroller will self-fold.



NOTE: Before folding, lock the wheels in the backward position, so the stroller free-stands.

NOTE: Before folding, tuck away the sun visor/peak on the canopy.

10. To fold the chassis with the seat unit forward facing: first apply the brake then tuck away the sun visor/peak back, then put the canopy/hood back fully to meet the seat.

Using your thumb, pull down the lever (9.a.) and then lift up the recline lever to release the seat. Push the whole seat forward toward the front wheels and the stroller will self-fold.

11. Both rearward and forward facing - pull the carry handle upwards to fold the chassis. Squeeze the chassis together if required so that the chassis locking clip locks into place in the largest position. The folded chassis can now free-stand or lie flat.

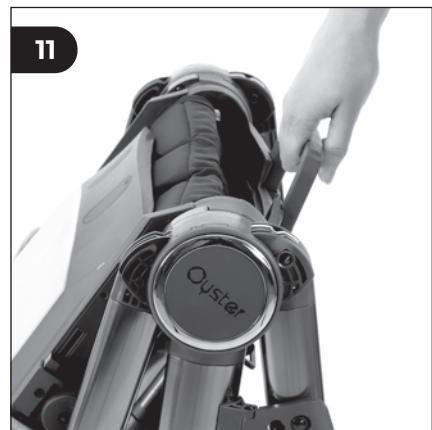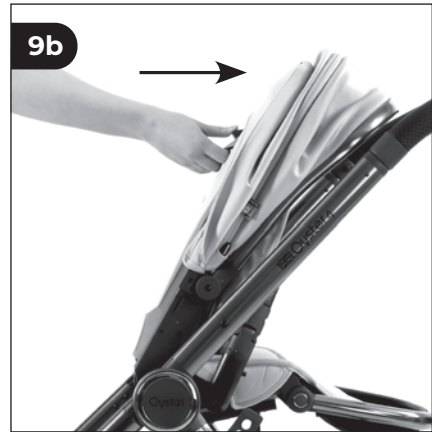

FOLDING THE CHASSIS WITH THE SEAT UNIT / CARRYCOT / CAR SEAT REMOVED

12. Apply the brake. Supporting the handlebar, press down on one of the release levers inside the central hub and proceed to press down on the other side. The chassis will then self fold.



13. To lock the chassis when no seat is attached, lift the chassis locking clip and squeeze in to smallest position.



ADJUSTING THE HANDLE HEIGHT

14. The handle height is adjustable to four positions. To adjust the handle height, hold in the button in the middle of the handle grip, slide the handle up or down to one of the four positions. The handle will click into one of the pre-set positions when the button is released.



USING THE PARKING BRAKE

15. To engage the brake, firmly press down on the brake lever found in the middle of the rear axle. Check that the brake is fully engaged before letting go of the handle. To release the brake, press forwards or lift up the brake lever until the wheel moves freely.

WARNING: Never leave the stroller without first engaging the brake.

WARNING: Always ensure that the parking brake is applied when placing and removing children.




FITTING AND REMOVING THE BUMPER BAR

16. Push both ends of the bumper bar into the corresponding entry slots on the seat unit until the bumper bar locks into position. To remove the bumper bar, press in the bumper bar release buttons on either side underneath the entry slots on the seat unit.



FITTING AND REMOVING THE SEAT UNIT

17. Align the seat attachments into the central hubs on either side of the chassis. Push down until the seat unit clicks and locks into position. Ensure the seat unit is locked in position by trying to pull the seat from the chassis. The seat unit can be fitted facing forwards or rearwards.

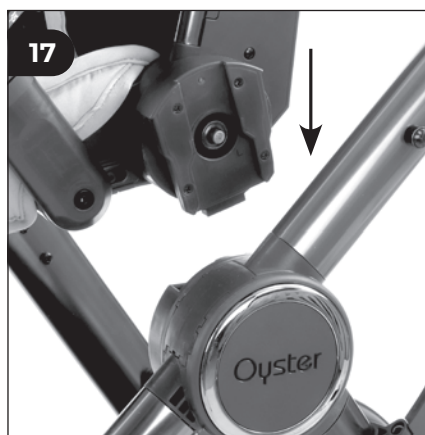

18. Gently hold the seat unit at the top of the back rest and with your other hand locate the handle under the seat padding, pull forwards and lift up. This will release the seat from the attachment device.



ADJUSTING THE SEAT UNIT BACKREST

19. Pull the down the lock with your thumb and then lift lever at the top rear of the backrest to recline the seat backrest. The seat backrest has three pre-set positions.

When the seat backrest is in the required position, release the lever and the seat will lock into position. To move the seat backrest from any of the reclined positions simply push/lift the seat backrest without using the seat recline lever.



ADJUSTING THE CALF REST

20. To lower the calf rest press in the buttons on both sides at the top of the calf rest and push down. To raise the calf rest into higher positions, lift the calf rest and it will automatically click into the next position.



21. The calf rest also has a pop-up feature. Push up from beneath the calf support until it pops into position. There is also a small secret zipped pocket under the footrest.



USING THE HOOD/SUN CANOPY

22. The seat unit has a multi-function hood that helps to protect your child from the elements. The hood is extendable, factor 50+ protected and has a peekaboo ventilation window as well as a flip out sun visor.



23. To extend the hood, unzip the zip across the centre of the hood to get the full extension.



24. To utilise the peekaboo ventilation window fold over the fabric of the panel nearest the back rest.



25. The sun visor is neatly folded inside the front of the hood. Simply reach in and pull the visor and it will spring forward into position. The visor is attached by a zip if you wish to remove or reattach.



UPF INDICATOR


26. The sun canopy features a reactive tag which is an indicator of UV levels. The more vibrant the colour, the higher the UV levels directly on the canopy.

WARNING: The UPF Indicator is to demonstrate UV levels and is not scientifically proven. Please keep your baby out of direct sunlight.



ADJUSTING THE HOOD / CANOPY / HARNESS SHOULDER HEIGHT


27. Push in the buttons on both sides at the base of the hood. Whilst the buttons are pressed, lift to raise the height of the hood/canopy or lower to reduce the height of the hood/canopy. When the buttons are released the hood will automatically click into one of four pre-set positions.

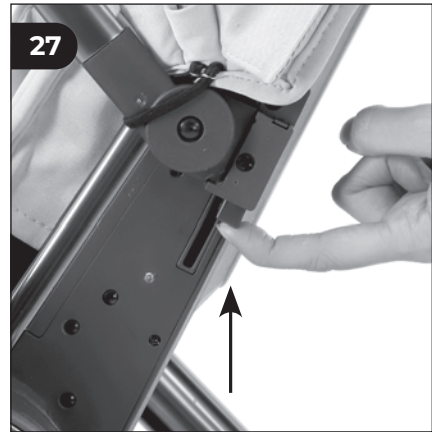

USING THE RESTRAINT SYSTEM


28. Always apply the parking brake before placing your child in the vehicle.

The restraint system (safety harness) has two shoulder straps, a waist belt, crotch strap and magnetic buckle.

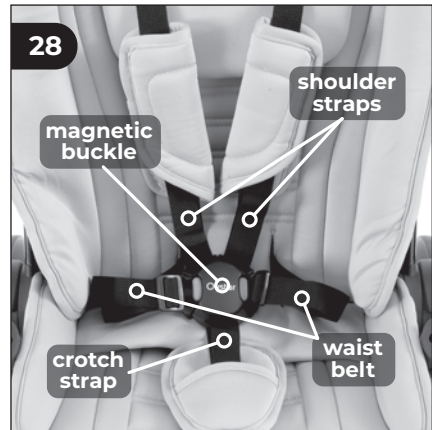

29. Place the two shoulder straps over the child's shoulder and the waist belt around the waist. The crotch strap should be placed between the child's legs.

To secure: 29.a. fit together the left connector from the shoulder strap with the left connector from the waist belt, and the same for the other side.

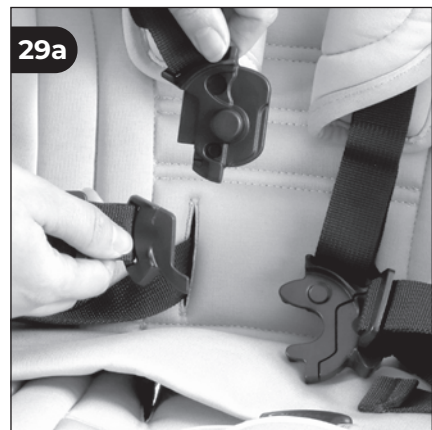

29.b. Join the sides together using the magnets until you hear a click. Place the buckle from the crotch strap on top until you hear a click. The buckle is now secure.



30. To release the 5-point magnetic buckle, firmly press the buttons either side and pull the front part away.

The harness can be adjusted to suit your child by sliding the adjusters along the shoulder straps and waist belt. To release the safety harness, push the button in the centre of the buckle. The crotch strap can be adjusted to suit your child. There are two button holes in the seat base. Thread the buckle through the hole in the plastic seat base then through the opening in the seat covers and reposition, passing back through first the seat cover and then through the opening in the plastic seat base.



WARNING: Ensure the buckle and connectors are fully engaged before use.

WARNING: Always use the crotch strap in combination with the waist belt.

ALWAYS USE THE SAFETY HARNESS

FITTING THE STROLLER RAIN COVER

31. To fit the stroller rain cover the hood needs to be fully extended. Unfold and place the rain cover so that it covers all the textile parts. Pull the elasticated bottom of the rain cover over the leg support. To secure the rain cover fasten the press stud on the strap around the back of the backrest.

FITTING THE FOOTMUFF

32. The footmuff top cover can be removed by unfastening the zip. The base of the footmuff can be used as seat liner without the top part. To attach the footmuff to the seat unit; release the harness clips from the centre buckle and release the shoulder straps from the waist belts at the buckle connection. Pass the shoulder straps and waist belts through the corresponding openings in the footmuff.

ASSEMBLING THE CARRYCOT

WARNING: This product is only suitable for a child who cannot sit up unaided. Max. 9kg.

WARNING: Only use on a firm, horizontal level and dry surface.

33. Remove the apron and mattress. Unzip the lining to gain access to the stay bars in the bottom of the carrycot. Using the three webbing tabs; pull the stay bars into position so that they are against the small plastic bumps on the baseboard. Zip up the lining, replace the mattress and refit the apron.




FITTING THE CARRYCOT APRON

34. Fasten the zip on the apron to the corresponding zip on the carrycot and pull all the way around. Secure the press studs between the apron and carrycot.

FITTING THE CARRYCOT TO THE CHASSIS

35. The carrycot can only be fitted to the chassis when the seat unit has been removed. The carrycot can only be fitted to the chassis facing the parent. Lower the carrycot into the attachment devices left and right. Push down until the carrycot clicks and locks into position. Check the carrycot is securely attached by trying to lift the carrycot from the chassis.

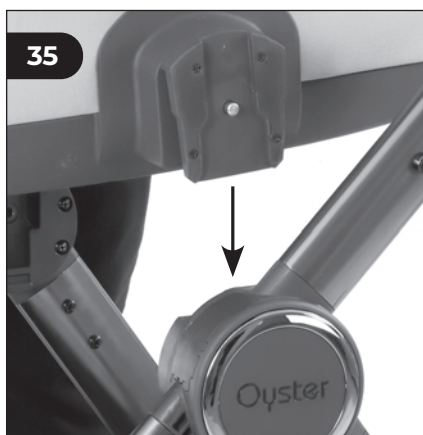

WARNING: The carrycot can not be fitted forward facing.

WARNING: Only use on a firm, horizontal level and dry surface.

WARNING: Do not use if any part of the carrycot is broken, torn or missing.

WARNING: Do not add another mattress on top of the mattress provided or recommended by the manufacturer.

WARNING: Do not place the carrycot near an open fire or other source of strong heat.

WARNING: Do not let children play unattended near the carrycot.

WARNING: The handles and the bottom of the carrycot should be inspected regularly for signs of damage and wear.

WARNING: Before carrying or lifting, ensure the handle is in the correct locked position.

WARNING: The head of the child in the carrycot should never be lower than the body of the child.

REMOVING THE CARRYCOT

36. Hold the carrycot using the handle at the front of the hood. While holding this, pull the handle situated at the back of the carrycot and lift. The carrycot will release from the chassis.



ADJUSTING THE CARRYCOT HOOD

37. Press in the buttons on the sides of the hood and pull up until you hear them click into place. Press in the buttons again to put the hood down.



ROCKING / STABILISING CARRYCOT

38. The carrycot is designed to be able to rock gently when placed on the floor and not attached to the chassis. There are four pop out feet under the carrycot which can be pulled out to stabilise the carrycot in a secure position.



FITTING THE CARRYCOT RAIN COVER

39. With the carrycot in place on the chassis, fully extend the hood. Unfold and place the rain cover over the hood of the carrycot so that the flap on the rain cover corresponds with the opening in the carrycot hood. Pull the rain cover down at the rear of the hood so that the elasticated edge covers the rear of the carrycot. Ease the front part of the rain cover over the apron and down around the front and sides of the carrycot. Fasten press studs below the attachment device.

FITTING THE OYSTER CAPSULE CAR SEAT TO THE CHASSIS

40. The car seat can not be attached to the chassis until the seat unit or carrycot has been removed. The multi adaptors fit many leading brands of car seats (check with your retailer for full details). Insert the car seat adaptors into the chassis attachment devices. The adaptors and chassis attachment devices are marked with an 'L' and 'R' to represent left and right from the perspective of you being in the pushing position.

41. Hold the car seat by the carry handle and lower the car seat onto the multi adaptors, the adaptors should slot into the cavity at the base of the car seat handle left & right. Push down the car seat firmly until the car seat clicks and locks into position. Check that the car seat is secure and locked by pulling up on the car seat handle.



WARNING: Should your child need to sleep, then they should be placed in a suitable pram body, cot or bed.

Children should be clear of moving parts while making adjustments.

REMOVING THE OYSTER CAPSULE CAR SEAT FROM THE CHASSIS

42. To remove the car seat from the chassis: Press down on the two buttons on the sides of the car seat and lift the car seat away from the chassis.




43. To remove the adaptors from the chassis push in the buttons on the bottom of the adaptors and lift the adaptors away from the attachment device.



FITTING AND REMOVING THE TANDEM ADAPTORS

44. Insert the tandem adaptors into the left and right sides of the main chassis housings until they lock into place with a click. Ensure the adaptors are also clicked in near the rear legs.

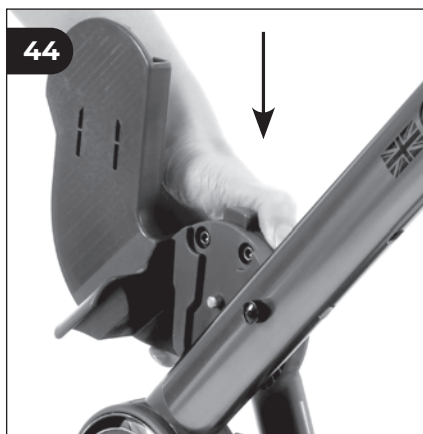

45. To remove the adaptors, press the button near the central housing 45.a and the button near the rear wheel 45.b. at the same time, and lift.



FITTING AND REMOVING REAR WHEEL GUARD

NOTE: When using the tandem adaptors, with the seat in the lower position, the rear wheel guards should be used.

46. To fit, remove the rear wheel (fig 3), and push the guard onto the inside of the wheel, lining up with the spokes until you hear a click. Guards should be fitted to both rear wheels.

To remove, take off the wheel and press the guard with two thumbs from the inside.


FITTING AND REMOVING THE TANDEM SEAT UNITS

NOTE: when using a seat unit in the lower configuration in tandem mode, ensure you use the rear wheel guards.

47. With the adaptors fitted, place the lower tandem seat forward facing into the tandem adaptors until it locks into place.

48. Then fit the upper seat forward facing, until it locks into place.

NOTE: Forward facing upper seat must be in the upright position.

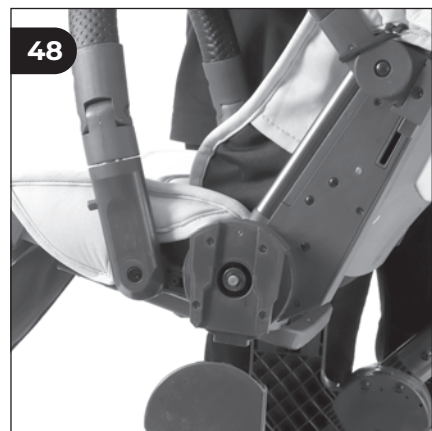

NOTE: In tandem mode the seat units are only designed to face forward. They will not click into place reward facing.

NOTE: Always fit the lower tandem seat first in the forward-facing position. Always fit the upper seat in the forward-facing position.

WARNING: Never attempt to fit or remove the seat unit while it is occupied, the child could be injured.

WARNING: Always remove the upper seat first. Make sure the parking brake is applied and only make configuration adjustments on firm level ground.


WARNING: The stability of your stroller will be affected when adding and removing seats, car seats or carrycots. Always remove the upper seat, car seat or carrycot first.

49. To remove the tandem seat units, gently hold the seat unit at the top of the back rest and with your other hand locate the handle under the seat padding, pull forwards and lift up. This will release the seat from the attachment device. Always remove the upper seat first.




FITTING AND REMOVING THE TANDEM CARRYCOTS

50. With the adaptors fitted, holding the lower carrycot by the carry handle, guide the carrycot in foot-end first until the fittings on the carrycot line up with the fittings on the tandem adaptor. Push the carrycot into the adaptor until it locks into place with a click.

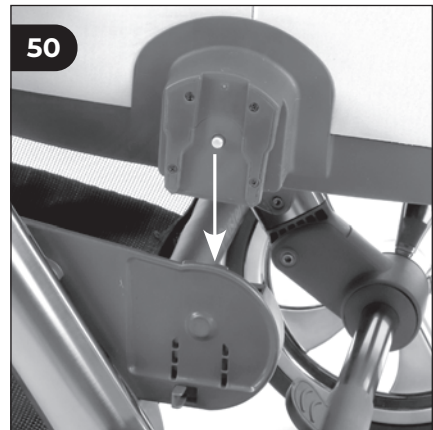

51. Fit the upper carrycot into the upper position facing rearward.

NOTE: Always fit the lower carrycot first in the forward-facing position. Always fit the upper seat in the rearward-facing position.

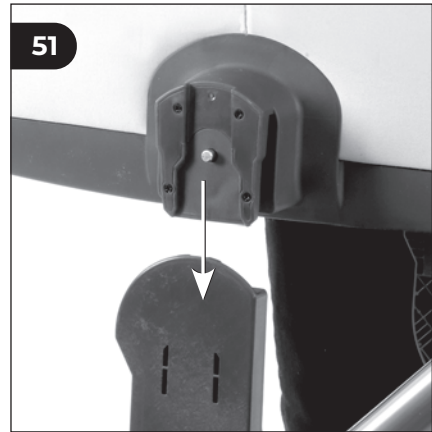


52. To remove the tandem carrycots, hold the carrycot by the carry handle with one hand and with the other hand lift up the lever at the back of the carrycot. Lift the carrycot up and out of the adaptor housing. Always remove the upper carrycot first.




FITTING AND REMOVING THE TANDEM CAR SEAT ADAPTORS

53. With the tandem adaptors fitted, fit the lower car seat adaptors first.


NOTE: Left and Right should be reversed and fitted the opposite way, with the top ends pointing forward.

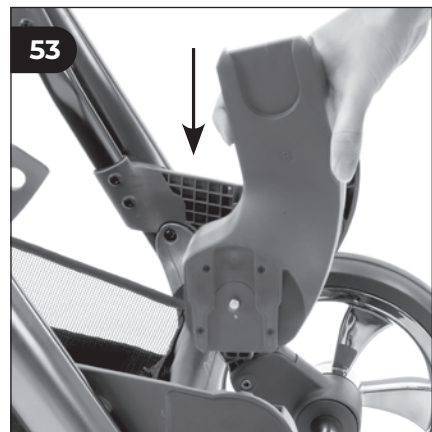

54. Fit the upper car seat adaptors as normal, with Left and Right from the perspective of standing behind the handlebar.

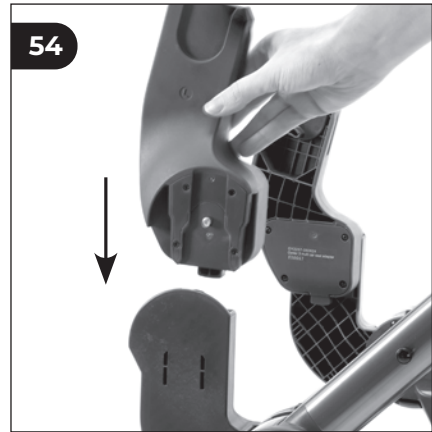

55. To remove the adaptors from the tandem adaptors push in the buttons on the bottom of the adaptors and lift the adaptors away from the attachment device.

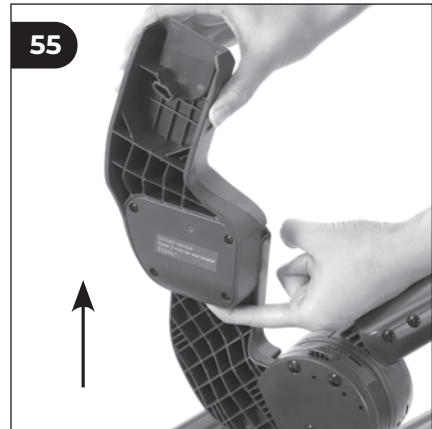

FITTING AND REMOVING THE TANDEM CAR SEATS

56. Fitting the lower car seat first, facing forward, align the car seat with the adaptors and lower until the car seat clicks into the adaptors



57. Then fit the upper car seat, facing rearward, align the car seat with the adaptors and lower until the car seat clicks into the adaptors.

WARNING: Ensure the car seats are locked into place by gently pulling the car seat upwards.

NOTE: Always fit the lower car seat first facing forward and then the upper car seat facing rearward.



58. To remove, press down on the buttons either side on the car seat and lift off the adaptors. Removing the upper car seat first.

WARNING: Always remove the upper car seat first.

For car seat compatibility head to babystyle.co.uk. Do not use a car seat other than those recommended.



59. APPROVED TANDEM CONFIGURATIONS

WARNING: Never attempt to use the Oyster4 in tandem mode in any other combinations than those shown here.

59.A. Tandem seat units

- Max 15kg per seat

NOTE: rear wheel guards must be used when seat is in the lower position.

NOTE: Forward facing upper seat must be in the upright position.



59.B. Tandem carrycots

- Max 9kg per carrycot



59.C. Tandem car seats

- Max 13kg car seat



59.D. Forward facing lower carrycot and rearward facing upper car seat.

- Max 9kg carrycot
- Max 13kg car seat



59.E. Forward facing lower carrycot and forward facing upper seat unit.

- Max 9kg carrycot
- Max 15kg seat

NOTE: Forward facing upper seat must be in the upright position.



59.F. Forward facing lower car seat and forward facing upper seat unit.

- Max 13kg car seat
- Max 15kg seat

NOTE: Forward facing upper seat must be in the upright position.



59.G. Forward facing lower seat unit and rearward facing upper carrycot.

- Max 15kg seat
- Max 9kg carrycot

Lower seat must be reclined to its second position.

NOTE: rear wheel guards must be used when seat is in the lower position.



59.H. Forward facing lower seat unit and rearward facing upper car seat.

Lower seat must be reclined to its second position.

NOTE: rear wheel guards must be used when seat is in the lower position.

WARNING: Stability hazards. Do not use the stroller in any of the following configurations.

IMPORTANT

- When using tandem configurations, ALWAYS remove the upper seat unit/carrycot/car seat first.
- When using the seat or car seat in the lower tandem position ALWAYS use the rear wheel guards.

59.I. DO NOT USE:

Tandem adaptors with seat unit in upper position only.

59.J. DO NOT USE:

Tandem adaptors with carrycot in upper position only.



59.K. DO NOT USE:

Tandem adaptors with any car seat in upper position only.



60. OYSTER BASKET CONFIGURATIONS

60.A. Using the tandem adaptors, fit the Oyster Basket into the lower position, with the seat at the top forward facing.

- Max 9kg basket
- Max 15kg seat

NOTE: When using the basket with the seat unit, the seat unit should be in the upright position.



60.B. Oyster Basket in lower position, carrycot in upper position rearward facing.

- Max 9kg basket
- Max 9kg carrycot

NOTE: For use with the carrycot, put the basket handle back and hood.



60.C. Oyster Basket in lower position, with car seat in upper position.

- Max 9kg basket
- Max 13kg car seat

WARNING: Do not use the Oyster Basket in the upper position. Always fit the Oyster Basket in the lower position first.

WARNING: Always remove the upper seat/carrycot/car seat first.

WARNING: Stability hazards. Do not use the Oyster Basket in any of the following configurations.

60.D. **DO NOT USE:**

Basket in upper position only.



60.E. **DO NOT USE:**

The basket in the upper position with the seat/carrycot/car seat in the lower position.



USING THE OYSTER RIDE-ON BOARD

6l. Pull the trigger on each side to open the clasp, then place over the axle. 6la.

To secure, fully close the clasps ensuring they are locked. Check that the ride-on board is secure. 6lb.

To stow the ride-on board, lift up the board and push into position until it locks into place. 6lc.

To release the board, pull the top down and lower into position.

IMPORTANT SAFETY INFORMATION:

The Oyster Ride- on Board is intended for use for one child at a time from approximately 2 years to 20kg. Do not overload.

WARNING: Do not leave you child unattended

WARNING: Do not let your child play with this product

Do not use if any part is broken or missing

Make sure that your child is standing with both feet centrally on the platform surface

Always check the ride on board is secure before use

Suitable for use with Oyster3 & 4.



62. OYSTER RIDE-ON BOARD CONFIGURATIONS

62.A. Ride-on board with forward facing seat unit.

NOTE: When using the ride-on board with the seat unit, the seat unit should be in the upright position.



62.B. Ride-on board with rearward facing seat unit.



62.C. Ride-on board with carrycot.



62.D. Ride-on board with car seat.



FITTING THE CARRYCOT TO THE OYSTER CARRYCOT STAND

63 . To fit the Oyster Carrycot - line up the carrycot attachment devices with the fixtures on the stand and push down until you hear a click on both sides. To remove, use the lever on the back of the carrycot and pull the carrycot up.



For Oyster Carrycot Stand assembly instructions, please see the Carrycot Stand instruction manual.

- The Oyster Carrycot is compatible with the Oyster Carrycot Stand.
- When used in conjunction with the Oyster carrycot this product is suitable only for a child who cannot sit up unaided, roll over and cannot push itself up on its hands and knees. Maximum weight of the child; 9kg.
- Before carrying or lifting the carrycot, make sure that the handle is locked into the correct position.
- Only use replacement parts supplied or approved by the

manufacturer.

- When the stand is not in use, it shall be stored away from children.
- For correct and safe assembly and use of the carrycot check the Oyster instructions.

WARNING:

- Never leave the child unattended.
- Only use on a firm, horizontal level, flat and dry surface.
- Do not place the carrycot near an open fire or other source of strong heat.
- Do not leave anything in the carrycot that could present a danger of suffocation, e.g. non-rigid toys, pillows etc.
- Do not let other children play unattended near the carry cot and stand.
- Do not use if any part of the stand is broken, torn or missing.
- Before carrying or lifting the carrycot, make sure that the handle is locked in the correct position.
- The handle and the bottom of the carrycot should be inspected regularly for signs of damage and wear.
- The head of the child in the carrycot shall never be lower than the body of the child.
- Be aware of the hazard of bumping the carrycot when putting on the floor or going through doors.
- Do not add another mattress on top of the mattress provided.
- Do not place the carrycot close to another product, which could present a danger of strangulation e.g. strings, blinds/curtain cords etc.
- Overheating can endanger the life of the child! Take into account the ambient temperature and the child's clothing and ensure that the child is not too hot or too cold.

WARNING:

- It is recommended you ask a health professional for advice on safe sleeping.
- It is recommended that the carrycot canopy is folded back and the apron - top cover - is removed when the child is sleeping in the carrycot indoors.

CARE AND MAINTENANCE

- Regularly check screws, rivets, bolts and fastenings to ensure they are locked tight and secure. Replace any parts in an inferior condition. When using this product during the winter, by the sea or off road it is important to clean using fresh water and dry thoroughly. Salt water and salt and grit from the roads will corrode metal parts unless removed.
- Check on a regular basis that all chassis locking devices are working correctly.
- If any part of the product is damaged, contact your local BabyStyle retailer immediately without using the pushchair.
- Do not expose the product to excessive sunlight, even normal exposure to sunlight may cause change to the colour of the fabrics.
- Take care not to tear fabrics when transporting the stroller.
- Light oil or petroleum jelly (vaseline) can be used to lubricate moving parts. Periodically remove the rear wheels; clean, lubricate and replace.
- Ensure all zips are either fully open or closed to prevent damage.
- Always use the rain cover in inclement weather.
- Do not place items on top of the hood/canopy, it could damage the fabrics or render the product unsafe.
- Any load attached to the handle and/or on the back of the back rest and/or on the sides of the stroller will affect the stability of the stroller.
- Tyres can leave marks on some surfaces such as vinyl flooring or carpet.
- Fabrics should only be cleaned in accordance to the care labels.
- Do not place fabrics in a washing machine, hand wash or sponge clean only using mild detergent and warm water (30°C).

WARRANTY POLICY

KEEP YOUR ORIGINAL RECEIPT OF PURCHASE SAFE WITH YOUR WARRANTY INFORMATION

It will be required should you unfortunately find a defect. The receipt must show the date of purchase clearly. In the first instance you must contact the original place of purchase. Repairs to any part of this product do not extend the warranty period. Do not return your product direct to the manufacturer.

SERVICING OF YOUR OYSTER4 STROLLER

We recommend that this product is regularly maintained and is serviced by a BabyStyle authorised dealer at least every 12 months. Only replacement parts supplied or recommended by the manufacturer/ distributor shall be used.

DISCLAIMER

Whilst we believe the information set out in this instruction manual to be correct and reliable at the time of print, we do not accept responsibility for its accuracy and we shall not be liable for its interpretation and its use. We reserve the right to change, modify, add or delete product specifications at any time without prior notice.

YOUR WARRANTY POLICY

At BabyStyle, we guarantee your product has been manufactured in accordance with all current European safety standards which are applicable to this product, and that this product is free from any defects in workmanship and material at the time of purchase. During the production process this product has gone through rigorous quality checks. Despite our efforts, if this product does show a manufacturing or material defect within the 24 months warranty period for the chassis and seat frames and 6 months seat fabrics and PVC rain cover, we will comply to the warranty terms and conditions providing the product has been used for normal use as described within the instruction manual and it has been serviced and maintained correctly as described in the instruction manual, for further information please contact the place of purchase. Please retain your original receipt of purchase safely.

WARRANTY TERMS

Chassis: 24 consecutive months.

Fabrics, accessories and PVC rain cover: 6 consecutive months.

The warranty only applies to the original purchaser and is non-transferable.

The warranty will be invalidated in the following circumstances:

- The product has not been used for its intended purpose as described within the instruction manual.
- If the product is returned for repair through a dealer not authorised by us.
- If the original receipt of purchase cannot be provided.
- If the defect is as a result of improper use or incorrect maintenance, negligence or impact damage.
- If the parts show normal wear and tear that may be expected from daily use of the product (wheels, rotating or moving parts etc).
- The warranty of this product becomes valid from the date of purchase as stated on the original receipt of purchase. This does not affect your statutory rights.

REGISTER YOUR WARRANTY:

babystyledirect.co.uk

We are proudly
part of the



bpia.co.uk



36 Charles Street, Sileby,
Leicestershire LE12 7RJ.

T: 01509 816444
E: info@babystyle.co.uk
www.babystyle.co.uk

©BabyStyle UK Ltd RP1509 04122024